


# Start Guide

ICR-3201, ICR-3211, ICR-3231  
ICR-3232, ICR-3241



**ADVANTECH**

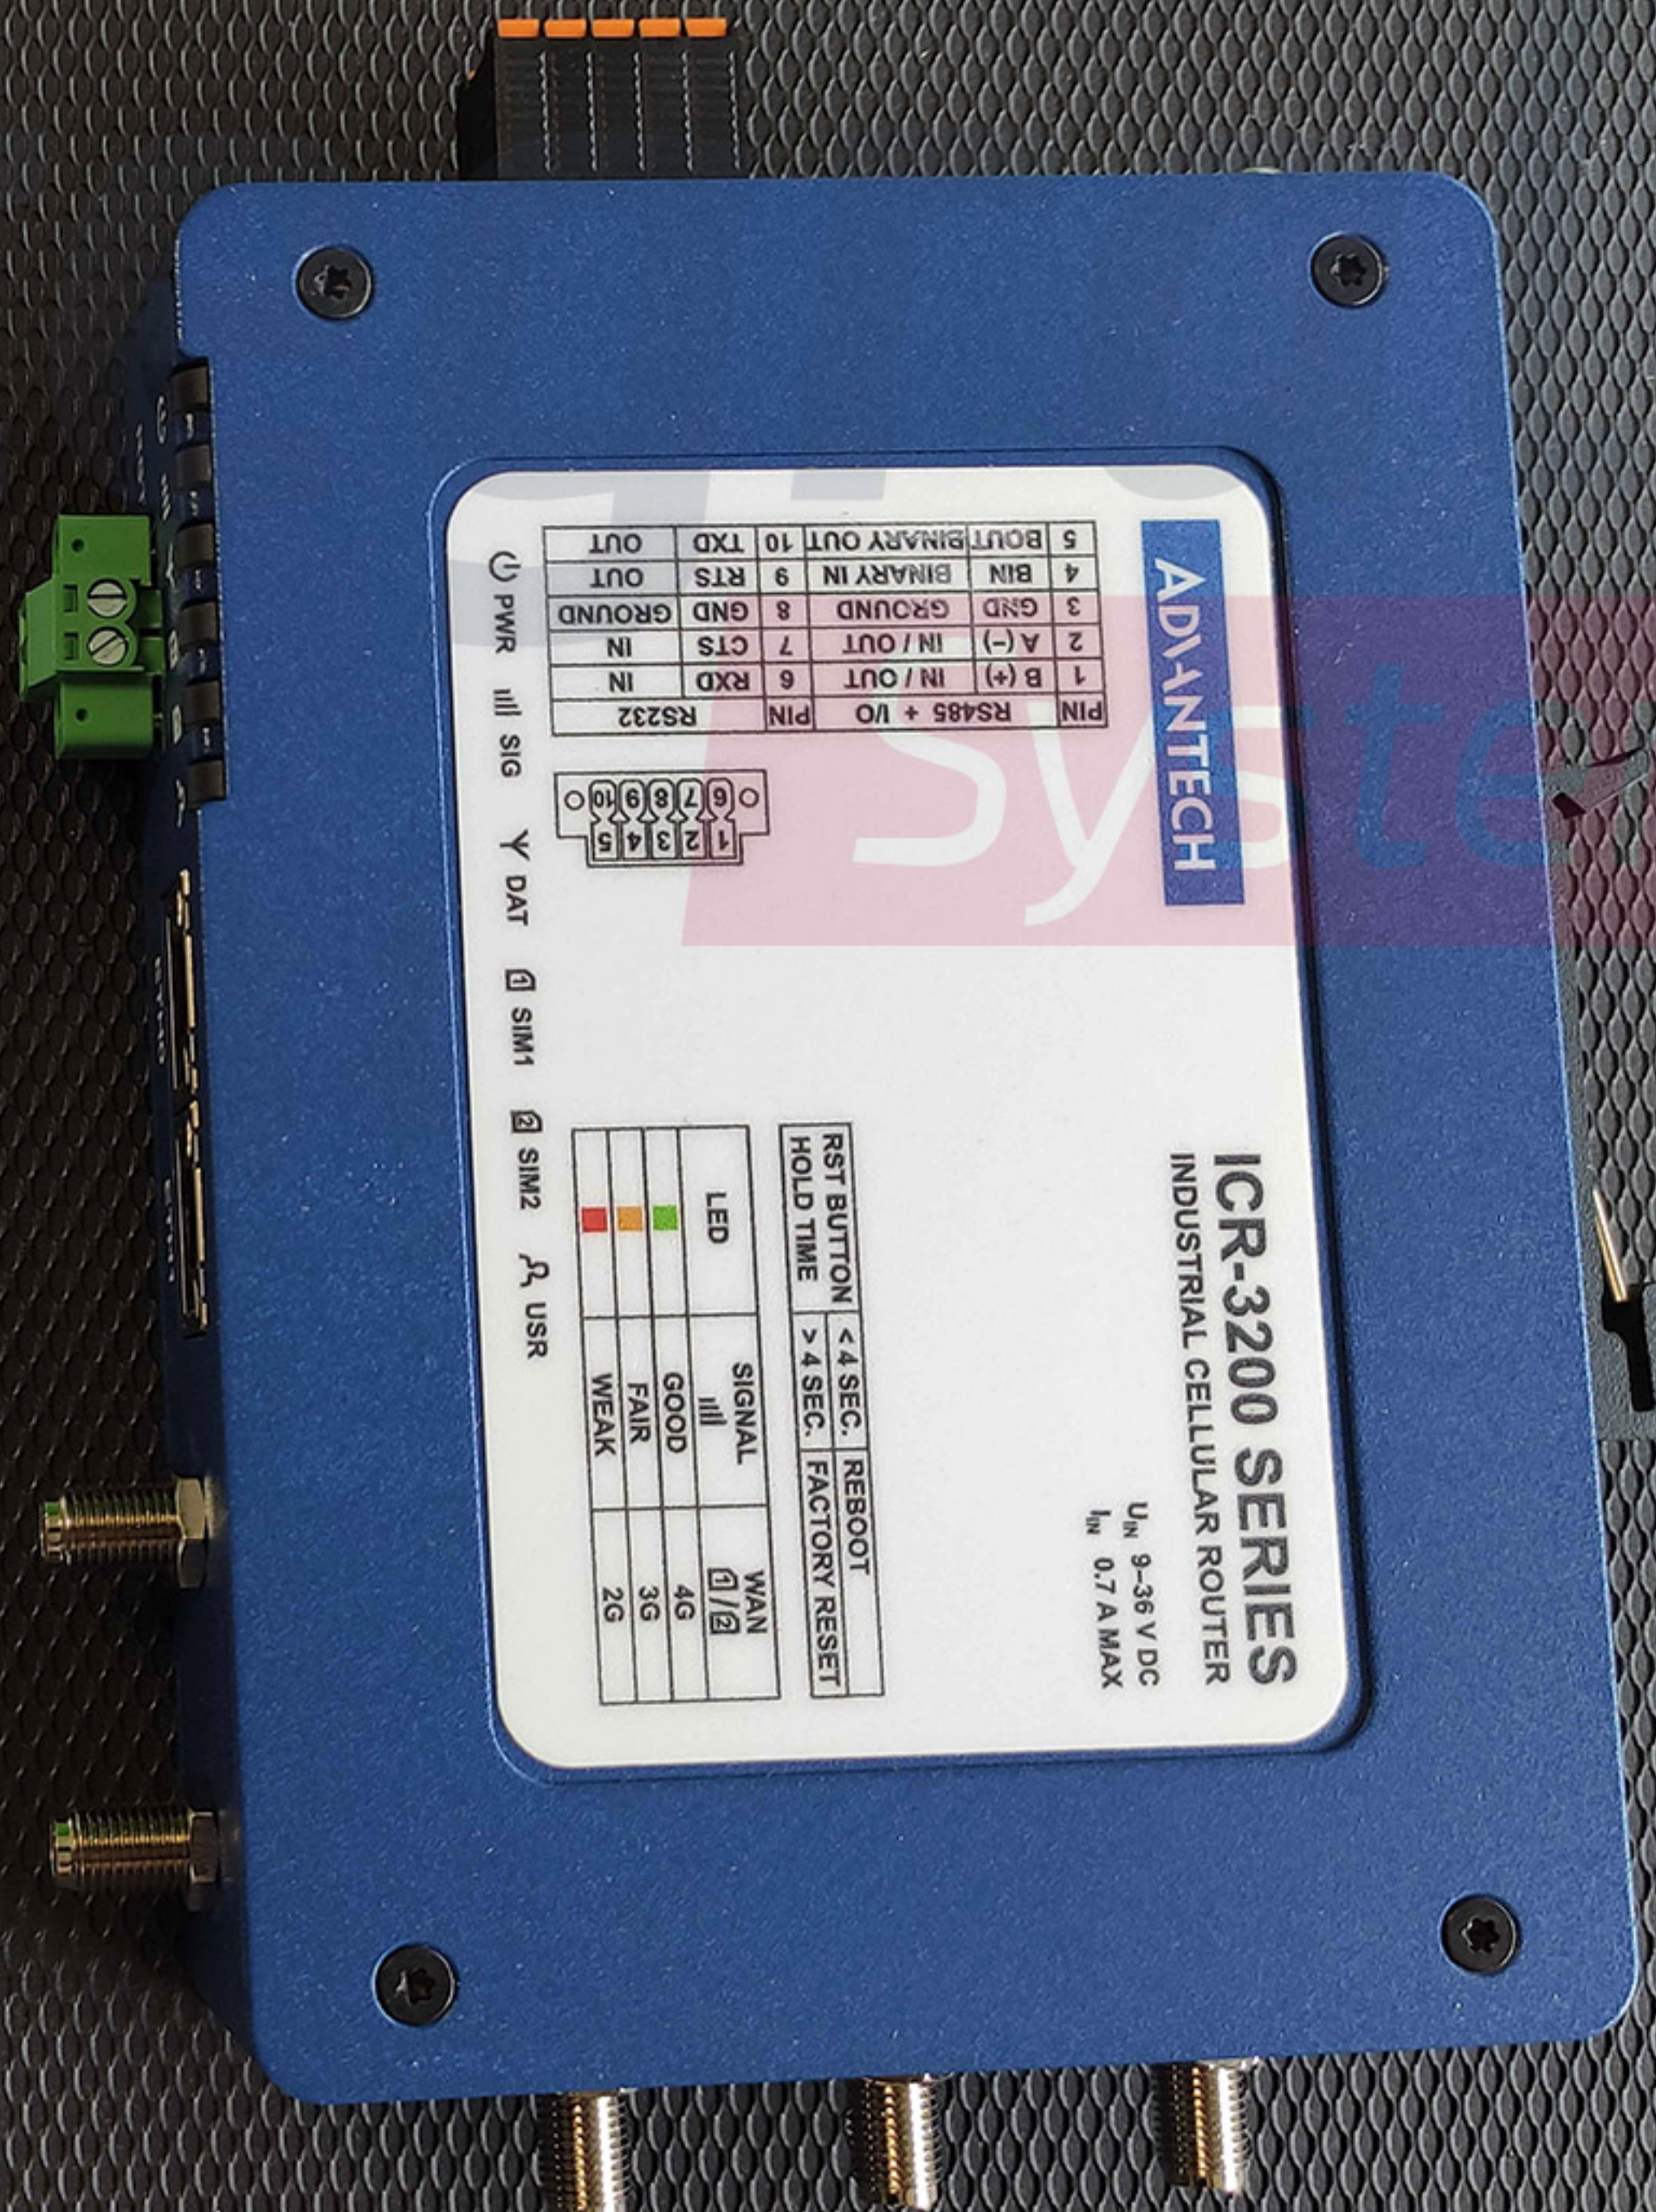

**ADVANTECH**

**ICR-3200 SERIES**  
INDUSTRIAL CELLULAR ROUTER

U<sub>IN</sub> 9-36 V DC  
I<sub>IN</sub> 0.7 A MAX

| PIN | RS485 + / I/O  | PIN | RS232   |
|-----|----------------|-----|---------|
| 1   | B (+) IN / OUT | 6   | RXD IN  |
| 2   | A (-) IN / OUT | 7   | CTS IN  |
| 3   | GND            | 8   | GND     |
| 4   | BIN BINARY IN  | 9   | RTS OUT |
| 5   | BOU BINARY OUT | 10  | TXD OUT |



⏻ PWR    📶 SIG    📶 DAT    📶 SIM1    📶 SIM2    📶 USB

| LED | SIGNAL | WAN |
|-----|--------|-----|
| 🟢   | GOOD   | 4G  |
| 🟡   | FAIR   | 3G  |
| 🔴   | WEAK   | 2G  |

| RST BUTTON HOLD TIME | < 4 SEC. | > 4 SEC.      |
|----------------------|----------|---------------|
|                      | REBOOT   | FACTORY RESET |