


User Manual

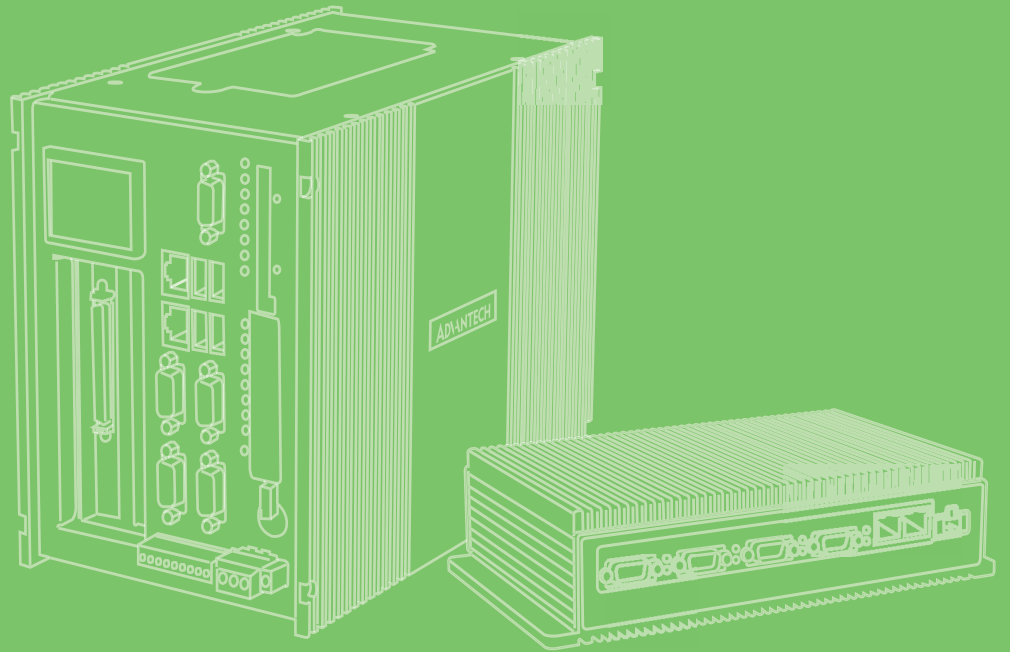

UNO-2271G V2 電腦

Intel® Pocket-Size Gateway with
2 x GbE, 2 x USB 3.2, 1 x mPCIe,
1 x HDMI, 1 x eMMC

ADVANTECH

Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2022 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. The information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties that may result from its use.

Acknowledgments

Intel[®], Celeron[™] and Pentium[™] are the trademarks of Intel[®] Corporation.
Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.
All other product names or trademarks are properties of their respective owners.

Support

For more information on this and other Advantech products, please visit our website at <http://www.advantech.com>

For technical support services, please visit our support website at <http://support.advantech.com/>

This manual applies to the following models. These are abbreviated as UNO-148 products in this article.

*Model name:

UNO-2271G V2

*Part number:

| | | |
|--------------------|--------------------|--------------------|
| UNO-2271G-N221AU | UNO-2271G-N221AE | UNO-2271G-N231AU |
| UNO2271GN2212101-T | UNO2271GN2212102-T | UNO2271GN2212103-T |
| UNO2271GN2212104-T | UNO2271GN2212105-T | UNO2271GN2212106-T |
| UNO2271GN2212107-T | UNO2271GN2212108-T | UNO2271GN2212109-T |
| UNO2271GN2212110-T | UNO2271GN2312101-T | UNO2271GN2312102-T |
| UNO2271GN2312103-T | UNO2271GN2312104-T | UNO2271GN2312105-T |
| UNO2271GN2312106-T | UNO2271GN2312107-T | UNO2271GN2312108-T |
| UNO2271GN2312109-T | UNO2271GN2312110-T | UNO2271GN2212201-T |
| UNO2271GN2212202-T | UNO2271GN2212203-T | UNO2271GN2212204-T |
| UNO2271GN2212205-T | UNO2271GN2212206-T | UNO2271GN2212207-T |
| UNO2271GN2212208-T | UNO2271GN2212209-T | UNO2271GN2212210-T |
| UNO2271GN2212211-T | UNO2271GN2212212-T | UNO2271GN2212213-T |
| UNO2271GN2212214-T | UNO2271GN2212215-T | UNO2271GN2312201-T |
| UNO2271GN2312202-T | UNO2271GN2312203-T | UNO2271GN2312204-T |
| UNO2271GN2312205-T | UNO2271GN2312206-T | UNO2271GN2312207-T |
| UNO2271GN2312208-T | UNO2271GN2312209-T | UNO2271GN2312210-T |
| UNO2271GN2212301-T | UNO2271GN2212302-T | UNO2271GN2212303-T |

Part No.
Printed in Taiwan

Edition 2
May 2022

| | | |
|--------------------|--------------------|--------------------|
| UNO2271GN2212304-T | UNO2271GN2212305-T | UNO2271GN2212306-T |
| UNO2271GN2212307-T | UNO2271GN2212308-T | UNO2271GN2212309-T |
| UNO2271GN2212310-T | UNO2271GN2212311-T | UNO2271GN2212312-T |
| UNO2271GN2212313-T | UNO2271GN2212314-T | UNO2271GN2212315-T |
| UNO2271GN2312301-T | UNO2271GN2312302-T | UNO2271GN2312303-T |
| UNO2271GN2312304-T | UNO2271GN2312305-T | UNO2271GN2312306-T |
| UNO2271GN2312307-T | UNO2271GN2312308-T | UNO2271GN2312309-T |
| UNO2271GN2312310-T | UNO2271GN2212401-T | UNO2271GN2212402-T |
| UNO2271GN2212403-T | UNO2271GN2212404-T | UNO2271GN2212405-T |
| UNO2271GN2212406-T | UNO2271GN2212407-T | UNO2271GN2212408-T |
| UNO2271GN2212409-T | UNO2271GN2212410-T | UNO2271GN2312401-T |
| UNO2271GN2312402-T | UNO2271GN2312403-T | UNO2271GN2312404-T |
| UNO2271GN2312405-T | UNO2271GN2312406-T | UNO2271GN2312407-T |
| UNO2271GN2312408-T | UNO2271GN2312409-T | UNO2271GN2312410-T |
| UNO2271GN2212501-T | UNO2271GN2212502-T | UNO2271GN2212503-T |
| UNO2271GN2212504-T | UNO2271GN2212505-T | UNO2271GN2212506-T |
| UNO2271GN2212507-T | UNO2271GN2212508-T | UNO2271GN2212509-T |
| UNO2271GN2212510-T | UNO2271GN2312501-T | UNO2271GN2312502-T |
| UNO2271GN2312503-T | UNO2271GN2312504-T | UNO2271GN2312505-T |
| UNO2271GN2312506-T | UNO2271GN2312507-T | UNO2271GN2312508-T |
| UNO2271GN2312509-T | UNO2271GN2312510-T | |

Product Warranty (2 years)

Advantech warrants the original purchaser that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products that have been repaired or altered by persons other than repair personnel authorized by Advantech, or products that have been subject to misuse, abuse, accident, or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced free of charge during the warranty period. For out-of-warranty repairs, customers will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details.

If you believe your product to be defective, follow the steps outlined below.

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages displayed when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain a return merchandise authorization (RMA) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a completed Repair and Replacement Order Card, and a proof of purchase date (such as a photocopy of your sales receipt) into a shippable container. Products returned without a proof of purchase date are not eligible for warranty service.
5. Write the RMA number clearly on the outside of the package and ship the package prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This type of cable is available from Advantech. Please contact your local supplier for ordering information.

Test conditions for passing also include the equipment being operated within an industrial enclosure. In order to protect the product from damage caused by electrostatic discharge (ESD) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference. In this event, users are required to correct the interference at their own expense.

警告使用者

此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

Technical Support and Assistance

1. Visit the Advantech website at www.advantech.com/support to obtain the latest product information.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before calling:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Precautions - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from the PC chassis before manual handling. Do not touch any components on the CPU card or other cards while the PC is powered on.
- Disconnect the power before making any configuration changes. A sudden rush of power after connecting a jumper or installing a card may damage sensitive electronic components.

Safety Instructions

1. Read these safety instructions carefully.
2. Retain this user manual for future reference.
3. Disconnect the equipment from all power outlets before cleaning. Use only a damp cloth for cleaning. Do not use liquid or spray detergents.
4. For pluggable equipment, the power outlet socket must be located near the equipment and easily accessible.
5. Protect the equipment from humidity.
6. Place the equipment on a reliable surface during installation. Dropping or letting the equipment fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. Do not cover the openings.
8. Ensure that the voltage of the power source is correct before connecting the equipment to a power outlet.
9. Position the power cord away from high-traffic areas. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage from transient overvoltage.
12. Never pour liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If any of the following occurs, have the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated the equipment.
 - The equipment has been exposed to moisture.
 - The equipment is malfunctioning, or does not operate according to the user manual.
 - The equipment has been dropped and damaged.
 - The equipment shows obvious signs of breakage.
15. Do not leave the equipment in an environment with a storage temperature of below -40°C (-40°F) or above 85°C (185°F) as this may damage the components. The equipment should be kept in a controlled environment.
16. **CAUTION:** Batteries are at risk of exploding if incorrectly replaced. Replace only with the same or equivalent type as recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
17. In accordance with IEC 704-1:1982 specifications, the sound pressure level at the operator's position does not exceed 70 dB (A).

18. This product is intended to be supplied by an UL certified power supply or dc source with SELV output, rated 10 Vdc, 7.7A minimum and Tma 40 degree. If you need further assistance, please contact Advantech for further information.
19. Ensure that the voltage of the power source is correct before connecting the equipment to a power outlet. The power outlet socket should have a grounded connection.
20. For use in pollution free environments and indoor use.
21. This equipment is not suitable for use in locations where children are likely to be present.
22. If the equipment is used in a manner not specified by the Advantech, the protection provided by the equipment may be impaired.
23. The equipment contains no user-serviceable parts. Do not open, Return to manufacturer for servicing.
24. Do not block air ventilation holes.
25. This is open type equipment and should be installed in a suitable enclosure.
26. Restricted Access Area: The equipment should only be installed in a Restricted Access Area.
27. This product is intended to be supplied by an UL Listed power supply suitable for use at Tma 60° C min. whose output meets ES1 (or SELV) is rated: (1) 10-30Vdc, 4A min. (DC IN) or 50-57Vdc, 0.51A min. (PoE IN), if need further assistance, please contact Advantech for further information.



Caution: Hot surface. Do not touch for Top Heatsink.

DISCLAIMER: These instructions are provided according to IEC 704-1 standards. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Consignes de sécurité

1. Lire attentivement les instructions de sécurité.
2. Conserver ce manuel pour utilisation ultérieure,
3. Débranchez cet équipement de toute prise secteur avant le nettoyer. Utilisez seulement un chiffon humide. N'utilisez pas de détergent liquide ou pulvérisé pour le nettoyage.
4. Gardez cet équipement à l'abri de l'humidité.
5. Placez cet équipement sur une surface fiable pendant l'installation. Le faire ou bien le laisser tomber peut causer des dégâts.
6. Les ouvertures sur l'enceinte servent à la convection de l'air. Protégez l'équipement contre surchauffe. **NE COUVREZ PAS LES OUVERTURES.**
7. Assurez-vous que la tension de la source d'alimentation est correcte avant de connecter l'équipement à une prise de courant. La prise de courant doit avoir une connexion à la terre.
8. Placez le câble d'alimentation de manière à ce que personne ne puisse marcher dessus. Ne placez rien sur le câble d'alimentation.
9. Toutes les mises en garde et tous les avertissements sur l'équipement doivent être notés.
10. Si l'équipement n'est pas utilisé pendant une longue période, débranchez-le de la source d'alimentation pour éviter tout endommagement dû à une surtension transitoire.

11. Ne jamais verser de liquide dans une ouverture. Cela pourrait provoquer un incendie ou un choc électrique.
12. N'ouvrez jamais l'équipement. Pour des raisons de sécurité, l'équipement doit être ouvert uniquement par du personnel qualifié.
13. Si l'une des situations suivantes se présente, faites vérifier l'équipement par le personnel de service:
 - un liquide a pénétré dans l'équipement.
 - L'équipement a été exposé à l'humidité.
 - L'équipement ne fonctionne pas bien, ou vous ne pouvez pas le faire fonctionner selon le manuel de l'utilisateur.
 - L'équipement ne fonctionne pas bien, ou vous ne pouvez pas le faire fonctionner selon le manuel d'utilisation.
 - L'équipement est tombé et endommagé.
 - L'équipement présente des signes évidents de rupture.
14. **NE LAISSEZ PAS CET ÉQUIPEMENT DANS UN ENVIRONNEMENT OU LA TEMPÉRATURE DE STOCKAGE PEUT ÊTRE INFÉRIEURE À -40° C (-40° F) OU BIEN SUPÉRIEURE À 85° C (185° F). CECI POURRAIT ENDOMMAGER L'EQUIPEMENT. L'ÉQUIPEMENT DEVRAIT ÊTRE DANS UN ENVIRONNEMENT CONTRÔLÉ.**
15. Ce produit est destiné à être alimenté par une source d'alimentation certifiée UL ou par une source cc convenant à une utilisation à une température minimale de 40 degrés Celsius, dont la sortie est conforme à la norme SELV et dont la puissance nominale est de 10 Vdc, 7.7 A, en cas de besoin. contactez Advantech pour plus d'informations.
16. Pour une utilisation dans des environnements non polluant et à l'intérieur.
17. C'est appareil ne doit pas être utilisé dans des endroits où se trouvent des enfants.
18. Si l'équipement est utilisé d'une manière non spécifiée par le fabricant, la protection fournie par l'équipement peut être altéré.
19. L'équipement ne contient aucune pièce réparable par l'utilisateur. Ne pas ouvrir, retourner au fabricant pour réparation.
20. Ne bloquez pas les ou es de ventilation.
21. Il s'agit d'un équipement de type ouvert et doit être installé dans un boîtier approprié.



Attention: Surface chaude, ne pas toucher pour le dissipateur thermique supérieur.

22. **ATTENTION:** Danger d'explosion si la batterie est mal remplacée. Remplacer uniquement par le même type ou équivalent recommandé par le fabricant. Jeter les piles usagées selon les instructions du fabricant.

安全指示

1. 請仔細閱讀此安全操作說明。
2. 請妥善保存此用戶手冊供日後參考。
3. 用濕抹布清洗設備前，請確認拔除電源線。請勿使用液體或去污噴霧劑清洗設備。
4. 對於使用電源線的設備，設備周圍必須有容易接觸到的電源插座。
5. 請勿在潮濕環境中試用設備。
6. 請在安裝前確保設備放置在可靠的平面上，意外摔落可能會導致設備損壞。
7. 設備機殼的開孔適用於空氣對流，從而防止設備過熱。請勿覆蓋開孔。
8. 當您連接設備到電源插座前，請確認電源插座的電壓符合要求。
9. 請將電源線佈置在人們不易絆倒的位置，請勿在電源線上覆蓋任何雜物。
10. 請注意設備上所有的警告標示。
11. 如果長時間不使用設備，請拔除與電源插座的連結，避免設備被超標的電壓波動損壞。
12. 請勿讓任何液體流入通風口，以免引起火災或短路。
13. 請勿自行打開設備。為了確保您的安全，請透過經認證的工程師來打開設備。
14. 如遇下列情況，請由專業人員維修：
 - 電源線或插頭損壞；
 - 設備內部有液體流入；
 - 設備曾暴露在過度潮濕環境中使用；
 - 設備無法正常工作，或您無法透過用戶手冊來正常工作；
 - 設備摔落或損壞；
 - 設備有明顯外觀損；
15. 請勿將設備儲存在超出建議溫度範圍的環境，即不要低於 -40°C (-40°F) 或高於 85°C (185°F)，否則可能會造成設備損壞。
16. 注意：若電池更換不正確，將有爆炸危險。因此，只可以使用製造商推薦的同一種或者同等型號的電池進行替換。請按照製造商的指示處理舊電池。
17. 根據 IEC 704 - 1:1982 規定，操作員所在位置音量不可高於 70 分貝。
18. 限制區域：請勿將設備安裝於限制區域使用。
19. 免責聲明：請安全訓示符合 IEC 704 - 1 要求。研華公司對其內容之準確性不承擔任何法律責任。
20. 消費者若使用电源适配器供电，则应购买配套使用获得 CCC 认证并满足标准要求的电源适配器。



警告：機殼高溫。請勿在使用過程中觸碰上方散熱鱗片。

Contents

| | | |
|------------------|---|-----------|
| Chapter 1 | Overview..... | 1 |
| 1.1 | Introduction | 2 |
| 1.2 | Safety Precautions | 2 |
| 1.3 | Packing List..... | 3 |
| 1.4 | Hardware Specifications | 3 |
| 1.4.1 | General | 3 |
| 1.4.2 | System Hardware | 3 |
| 1.4.3 | I/O Interfaces | 3 |
| 1.4.4 | Environment..... | 4 |
| 1.4.5 | Certification..... | 4 |
| 1.4.6 | Extension Kit (Optional)..... | 4 |
| 1.5 | Dimensions | 5 |
| | Figure 1.1 UNO-2271G V2 Dimensions | 5 |
| | Figure 1.2 UNO-2271G V2 Dimensions (with Optional Extension Kit)..... | 5 |
| | Figure 1.3 UNO-2271G V2 Dimensions (with Stack Extension Kit for iDoor)..... | 6 |
| Chapter 2 | Hardware Functionality..... | 7 |
| 2.1 | Introduction | 8 |
| 2.1.1 | Base Unit's Internal Connectors | 8 |
| | Figure 2.1 Diagram of Connector Locations on UNO-2271G V2 (Top Side)..... | 8 |
| | Figure 2.2 Diagram of Key Components Location on UNO-2271G V2 (Bottom Side)..... | 8 |
| | Table 2.1: Key Components, Connectors on Motherboard | 9 |
| 2.1.2 | Base Unit's External I/O Connector | 9 |
| | Figure 2.3 Front Panel of UNO-2271G V2..... | 9 |
| | Figure 2.4 Rear panel of UNO-2271G V2..... | 9 |
| 2.1.3 | Expansion Kit's Internal Connectors (Optional) | 10 |
| | Figure 2.5 Locations Internal I/O Connectors/Switches for UNO-2271G-RS2EA (Top Side) (Optional) | 10 |
| | Figure 2.6 Locations Internal I/O Connectors/Switches for UNO-2271G-RS2EA (Bottom Side) (Optional)..... | 11 |
| | Figure 2.7 Locations Internal I/O Connectors/Switches for UNO-2271G-RP1EA (Top Side) (Optional) | 11 |
| | Figure 2.8 Locations Internal I/O Connectors/Switches for UNO-2271G-RP1EA (Bottom Side) (Optional)..... | 12 |
| | Table 2.2: Internal Connectors and Jumper Switches..... | 12 |
| 2.1.4 | Others | 13 |
| | Figure 2.9 LED Indicators, Reset Buttons, and Antenna Hole... 13 | |
| Chapter 3 | Initial Setup | 15 |
| 3.1 | Chassis Grounding..... | 16 |
| | Figure 3.1 Chassis Grounding Connection Diagram | 16 |
| 3.2 | Connecting Power | 16 |
| 3.3 | Open and Close Bottom Cover | 17 |
| 3.4 | Installing a 2nd Stack Extension Kit | 18 |
| 3.4.1 | Installing a 2nd Stack Extension Kit (UNO-2271G-EKBE)..... | 18 |
| 3.4.2 | Installing a 2nd Stack Extension Kit (UNO-2271G-RS2EA) | 21 |

| | | |
|-------|---|----|
| 3.4.3 | Installing a 2nd Stack Extension Kit (UNO-2271G-RP1EA) | 23 |
| 3.5 | Installing Internal Component | 25 |
| 3.5.1 | Installing miniPCIe Module | 25 |
| 3.5.2 | Installing the M.2 B-Key Module on Extension Kit (UNO-2271G-RP1EA/UNO-2271G-RS2EA)..... | 27 |
| 3.5.3 | Installing the M.2 E-key Module on Extension Kit (UNO-2271G-RS2EA)..... | 29 |
| 3.6 | Antenna Installation (Optional)..... | 30 |
| 3.7 | BIOS Setting | 31 |

Appendix A System Settings/Pin Assignments .. 33

| | | |
|-------|---|----|
| A.1 | Power Connector (DCIN1) | 34 |
| | Table A.1: Power Connector Pin Assignments..... | 34 |
| A.2 | LAN: Ethernet Connector (LAN1) | 34 |
| | Table A.2: Ethernet Connector Pin Assignments | 34 |
| A.3 | USB Connector (USB1) | 35 |
| A.3.1 | USB 3.0 Connector..... | 35 |
| | Table A.3: USB 3.0 Connector Pin Assignments..... | 35 |
| A.4 | HDMI Connector (CN1)..... | 36 |
| | Table A.4: Display Port Adapter Cable Pin Assignments | 36 |
| A.5 | M.2 B-key Connector (CN2)..... | 37 |
| | Table A.5: M.2 B Key Connector Pin Assignments | 37 |
| A.6 | M.2 E-Key Connector (CN40) | 38 |
| | Table A.6: M.2 E key Connector Pin Assignments | 38 |
| A.7 | mPCIe Connector (MINI1) | 39 |
| | Table A.7: mPCIe Connector Pin Assignments | 39 |
| A.8 | COM Port RS232/422/485 Settings | 40 |
| | Table A.8: COM Connector Pin Assignments..... | 40 |
| A.8.1 | RS232/422/485 Setting (SW8/SW1)..... | 41 |
| A.8.2 | COM Port RS422/485 Termination Resistor Setting | 42 |
| A.9 | AT/ATX Setting (PSON1)..... | 42 |
| A.10 | Board to Board Connector (Reserved for Expansion) (CN13)..... | 43 |
| | Table A.9: Expansion Board to Board Connector Pin Assignments | 43 |
| A.11 | TPM 2.0 BIOS Setting..... | 44 |
| A.12 | CPU Turbo Mode BIOS Setting | 46 |
| A.13 | TCO Setting for Watchdog OS support..... | 47 |

Chapter 1

Overview

This chapter overviews specifications for UNO-2271G V2.

- Introduction
- Safety Precautions
- Accessories
- Hardware Specifications
- Dimensions

1.1 Introduction

Advantech's new UNO-2 series serve as modular Integrated Edge Controllers. They provide configuration flexibility for customers seeking to cost effectively optimize their services. The new integrated Din-rail mounting kit is designed to be more ruggedized and user-friendly, making it a perfect fit for control cabinets.

This new UNO-2271 V2 model features a ruggedized design with an industrial-grade Intel Celeron® N6210 1.2GHz, Pentium® N64151.2GHz processor and built-in onboard 4GB or 8GB, up to 256GB DDR4 RAM. It supports wide temperature range operation (-20 ~ 60° C/-4 ~ 140° F) and sufficient I/O - including 2 x LAN, 2 x USB 3.2, 1 x HDMI, 1 x 2 pin terminal block. It also supports 1 x full-size Mini PCIe slot (SATA/Pcie/USB2.0 signal) to enable expansion. An optional 2nd stack extension kit supports 2 x RS-232/422/4851 and 1 x POE+(802.3at), or 1 x iDoor module, such as industrial Fieldbus, as well as I/O and peripheral modules. This expandability makes Advantech's UNO-2 series an excellent choice for various industrial applications. Additionally, UNO-2's flexible expandability and control functions meet emerging demands for industry 4.0.

1.2 Safety Precautions

Below are a few safety precautions for preventing injury when making connections. In most cases, users can use a standard cable for connection.

Warning! *Always disconnect the power cord from the chassis before manual handling. Do not connect the chassis while the system power is on. A sudden rush of power can damage sensitive electronic components. Only experienced electronics personnel should open the chassis.*



Warning! *Toujours à la terre pour éliminer toute charge d'électricité statique avant toucher UNO-2271G V2. Appareils électroniques modernes sont très sensibles à charges d'électricité statique. Utilisez un bracelet antistatique à tout moment. Placez tous composants électroniques sur une surface antistatique ou dans un statique-sac blindé.*



Caution! *Always ground yourself to remove any static electric charge before touching UNO-2271G V2. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static shielded bag.*



Caution! *Toujours débrancher le cordon d'alimentation de votre boîtier lorsque vous êtes travailler. Ne branchez pas lorsque l'appareil est allumé. Un afflux soudain de puissance peut endommager les composants électroniques sensibles. Seulement connu personnel de l'électronique devraient ouvrir le châssis.*



1.3 Packing List

Please refer to below packing list:

- UNO-2271G V2
- 1 x plug-in block for power wiring
- Simplified Chinese manual
- Quick Start Guide
- Warranty card

If anything is missing or damaged, contact your distributor or sales representative immediately.

1.4 Hardware Specifications

1.4.1 General

| | |
|-------------------------------|---|
| Dimensions (W x D x H) | 30 x 70 x 100 mm (11.8 x 27.6 x 39.3 in) |
| Weight (Net) | 0.5 kg (1.1 lbs) |
| Mounting | Stand/Wall mount (Optional Din-rail mount/VESA mount) |
| Power Requirement | 10 - 30V _{DC} |
| Power Consumption | 16W (typical), 30W (Max) with 2nd stack expansion module (UNO-2271G-RP1EA): Max to 33.3W (PoE input Max to 25.5W) with 2nd stack expansion module (UNO-2271G-RS2EA): Max to 34.8W |

1.4.2 System Hardware

| | |
|--------------------------|---|
| BIOS | AMI EFI X64 |
| Watchdog Timer | Programmable 255 levels timer interval, from 1 to 255 sec |
| Hardware Security | TPM 2.0 |
| Processor | Intel Celeron [®] N6210 1.2GHz or Pentium [®] N6415 1.2GHz |
| Memory | Onboard 4GB DDR4 1600MHz (Up to 8GB) |
| Graphics Engine | Intel [®] HD Graphics |
| Ethernet | Intel [®] Ethernet Controller i211AT/i210AT, IEEE1588 |
| LED Indicators | 1x RUN (programmable), 1 x Power, and LAN (active, status) |
| Storage | Onboard 32GB eMMC (upgradeable, up to 256GB) Option mSATA shared with mPCIe slot |
| Expansion | 1 x Full size mPCIe slot (SATA/PCIe/USB2.0 signal) |

1.4.3 I/O Interfaces

| | |
|------------------------|---|
| LAN Ports | 2 x RJ45, 10/100/1000 Mbps IEEE 802.3u 1000BASE-T Fast Ethernet |
| USB Ports | 2 x USB 3.2 GEN1 |
| Displays | 1 x HDMI (1920 x 1080 @60Hz) |
| Power Connector | 1 x 2 pin terminal block |

1.4.4 Environment

| | |
|-------------------------------|--|
| Operating Temperature* | -20 ~ 60° C (-4 ~ 140° F) @5~85% RH with 0.7 m/s airflow |
| Storage Temperature | -40 ~ 85° C (-40 ~ 185° F) |
| Relative Humidity | 10~95% RH @ 40° C/104° F, non-condensing |
| Shock Protection | Operating, IEC 60068-2-27, 50G, half sine, 11ms |
| Vibration Protection | Operating, IEC 60068-2-64, 2Grms, random, 5 ~500Hz, 1hr/axis (mSATA) |
| Ingress Protection | IP30 |

1.4.5 Certification

| | |
|----------------------|------------------------|
| Certification | CE, FCC, UL, CCC, BSMI |
|----------------------|------------------------|

1.4.6 Extension Kit (Optional)

UNO-2271G V2 features a modularized design. Advantech offers two optional 2nd stack extension kits for users to expand the functionality using an Advantech iDoor module.

| | |
|-------------------------------|---|
| Part number | UNO-2271G-RP1EA |
| Description | 2nd stack extension kit to support POE PD, COM, M.2 B key |
| Ports | 1 x POE (802.3AT), 1 x COM |
| Dimensions (W x D x H) | 30 x 70 x 100 mm (11.8 x 27.6 x39.3 in) |
| Weight | 0.3 kg (0.66 lbs) |

Note! *Due to max 25.5W supply via POE, USB ports should be limited to connect with USB2.0 devices only.*



| | |
|-------------------------------|--|
| Part number | UNO-2271G-RS2EA |
| Description | 2nd stack extension kit to support COM, M.2 B key, M.2 E key |
| Ports | 2 x COM, 1 x M.2 B key, 1 x M.2 E key |
| Dimensions (W x D x H) | 30 x 70 x 100 mm (11.8 x 27.6 x39.3 in) |
| Weight | 0.2 kg (0.44 lbs) |

| | |
|-------------------------------|--|
| Part number | UNO-2271G-EKCE |
| Description | 2nd stack extension kit to support 1 x iDoor module w/ powder coat |
| Ports | 1 x iDoor installation space |
| Dimensions (W x D x H) | 30 x 70 x 100 mm (11.8 x 27.6 x39.3 in) |
| Weight | 0.1 kg (0.22 lbs) |

Note! *Most of the iDoor modules can handle system operating temperatures of 60° C (140° F). (Exception: PoE iDoor, USB 3.0 iDoor).*



1.5 Dimensions

100 x 70 x 130 mm (11.8 x 27.6 x 39.3 in)

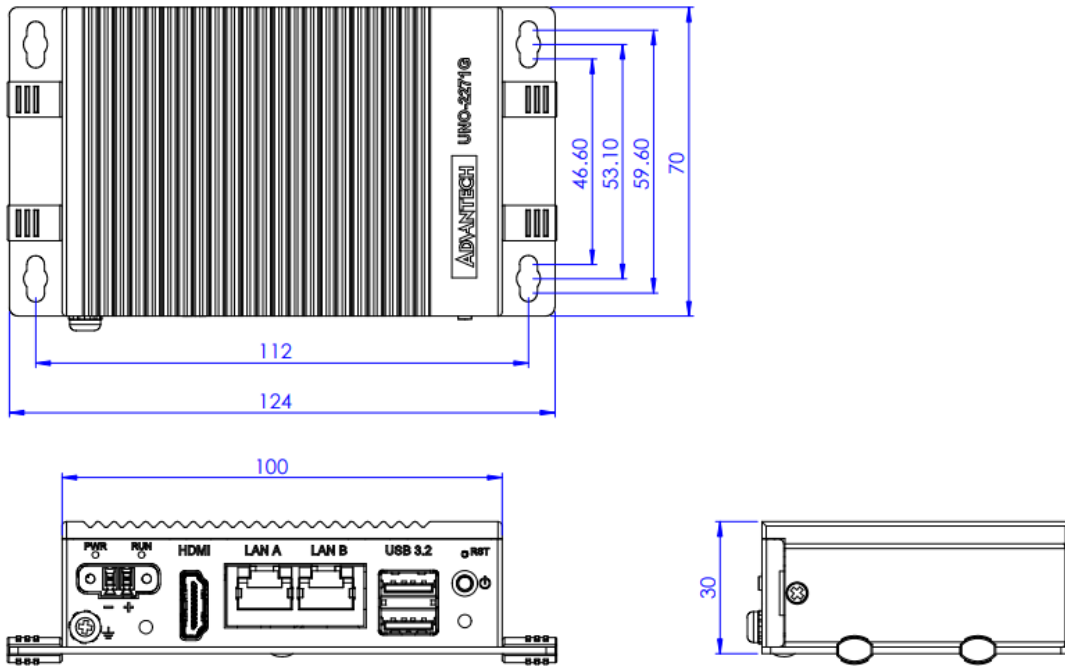


Figure 1.1 UNO-2271G V2 Dimensions

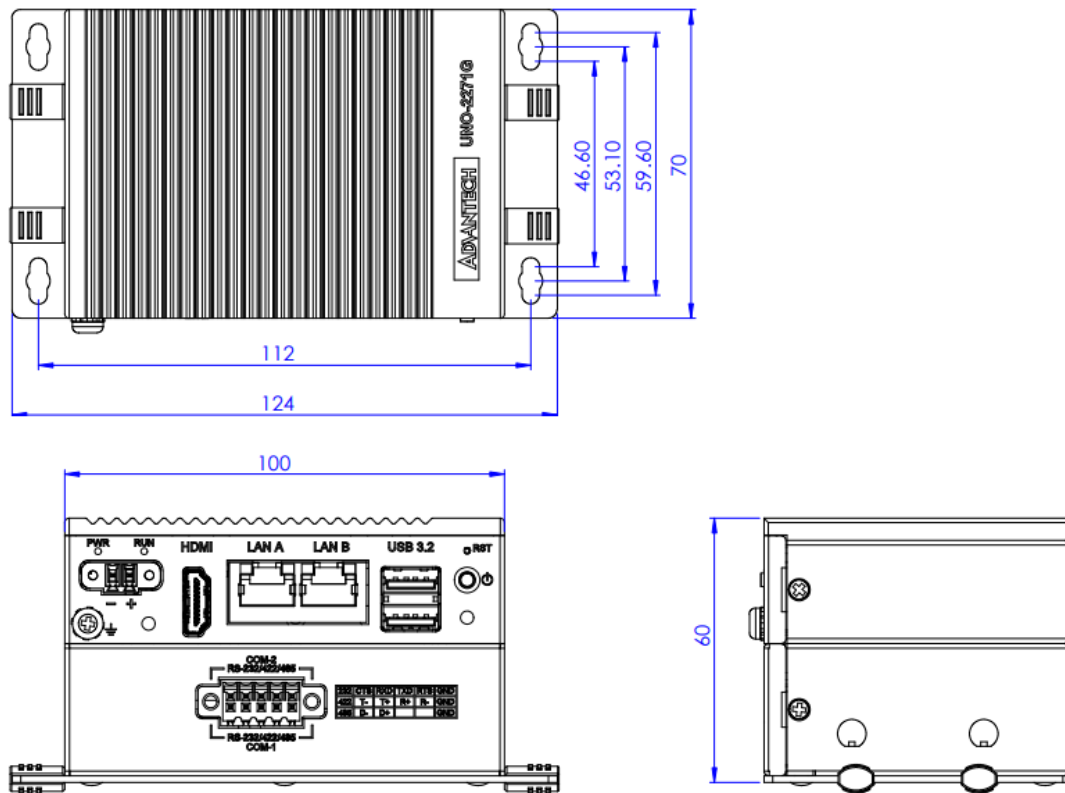


Figure 1.2 UNO-2271G V2 Dimensions (with Optional Extension Kit)

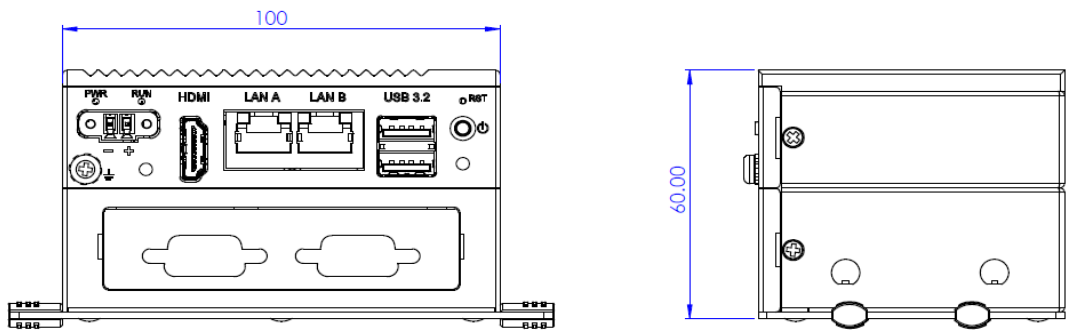
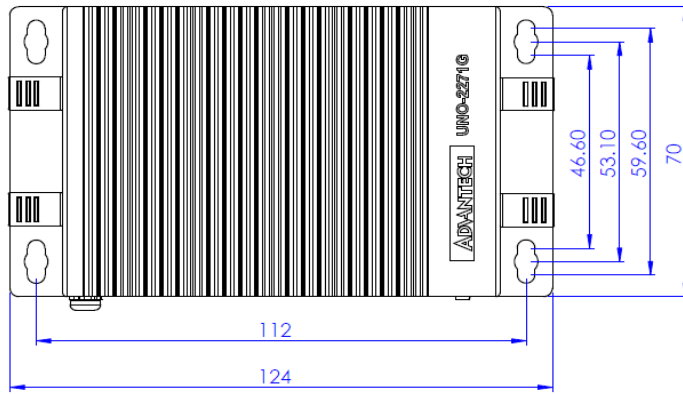


Figure 1.3 UNO-2271G V2 Dimensions (with Stack Extension Kit for iDoor)

Chapter 2

Hardware Functionality

This chapter details setup instructions for UNO-2271G V2's hardware functions. It includes connecting peripherals and indicators.

- Introduction
- External I/O Connector
- Internal I/O Connector
- LED Indicators
- Reset Buttons
- Antenna Hole

2.1 Introduction

The following diagram demonstrates the location of UNO-2271G V2's motherboard and extension kit's internal/external connectors.

2.1.1 Base Unit's Internal Connectors

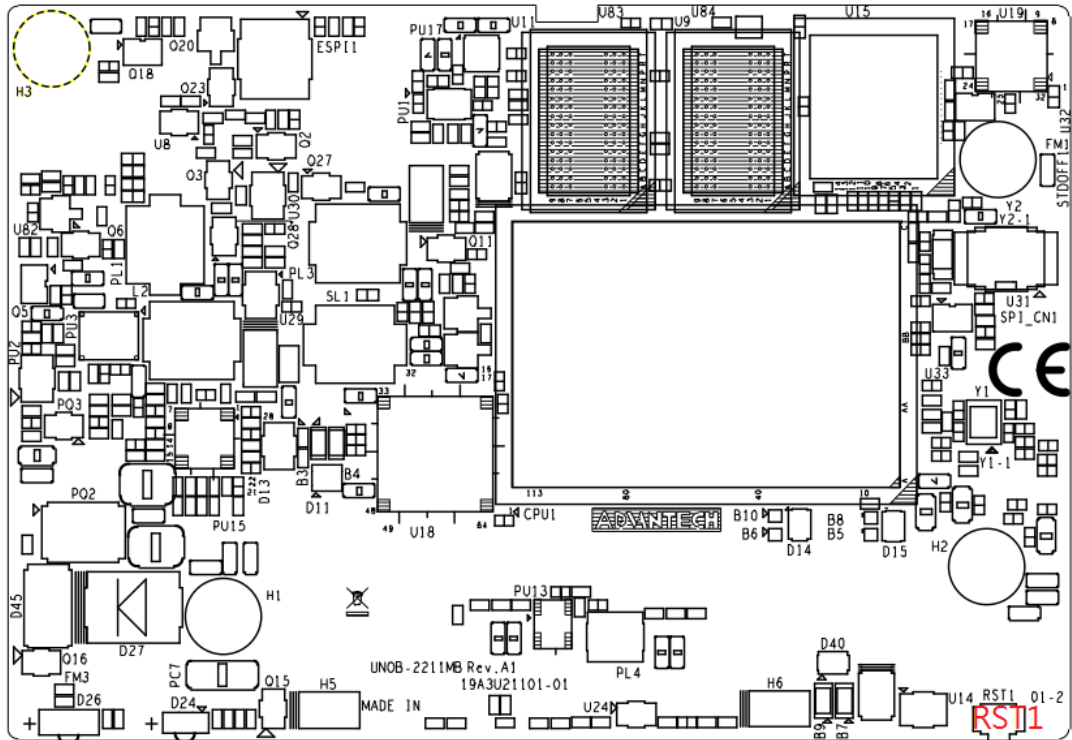


Figure 2.1 Diagram of Connector Locations on UNO-2271G V2 (Top Side)

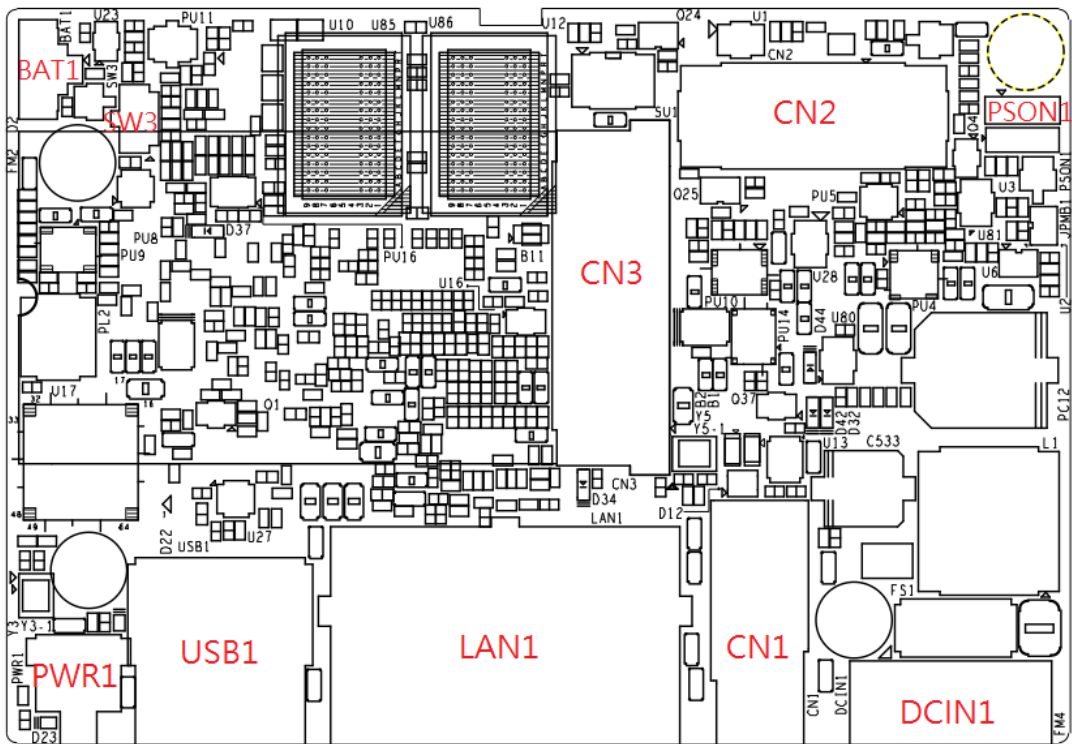


Figure 2.2 Diagram of Key Components Location on UNO-2271G V2 (Bottom Side)

| Table 2.1: Key Components, Connectors on Motherboard | | |
|--|-------|-------------------------|
| Category | Label | Function |
| External | PW1 | Power button |
| | RST1 | Reset button |
| | CN1 | HDMI connector |
| | LAN1 | LAN connector |
| | USB1 | USB 2.0+3.0 connector |
| | DCIN1 | DC input connector |
| Internal | CN2 | Expansion B2B connector |
| | CN3 | MiniPCIe connector |
| | BAT1 | RTC battery connector |

2.1.2 Base Unit's External I/O Connector

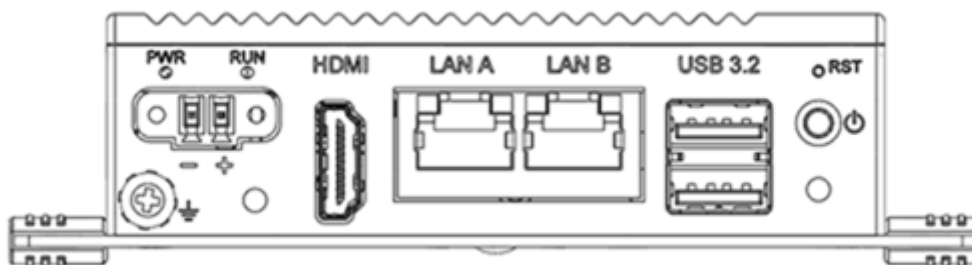


Figure 2.3 Front Panel of UNO-2271G V2

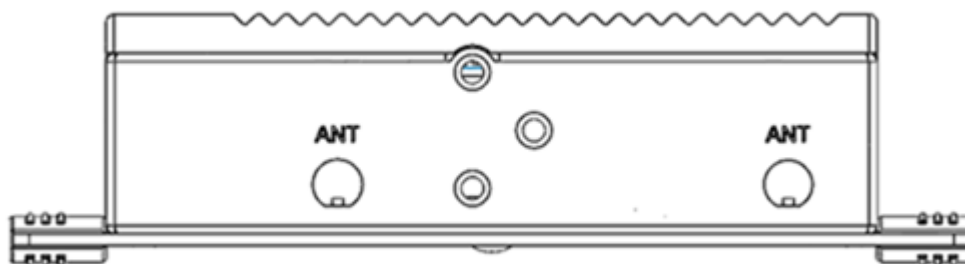


Figure 2.4 Rear panel of UNO-2271G V2

2.1.2.1 Power Connector

UNO-2271G V2 comes with a Phoenix connector that carries 10 - 30 V_{DC} external power input, and features reversed wiring protection. Therefore, the system will not accrue damage from reversed polarity of ground lines and power lines. (Please refer to User Manual - Appendix A.1 for pin assignments)

2.1.2.2 LAN: Ethernet Connector

UNO-2271G V2 is equipped with two Gigabit LAN controllers. An Intel[®] i211 or i210 Ethernet controller that complies with IEEE 802.3u 10/100/1000 Base-T is used as the controller chip. The Ethernet port is a standard RJ-45 jack. Additionally, LED indicators are provided on the front of the device to indicate the system's Link (off/green/orange) and Active (green) status. (Please refer to User Manual- Appendix A.2 for pin assignments.)

2.1.2.3 USB Connector

UNO-2271G V2 features 2 x USB ports for Rev. 3.2 specifications. The USB connectors support plug-and-play and hot-swap-ping functionality for external devices. Additionally, this can be enabled/disabled in the BIOS menu. (Please refer to User Manual- Appendix A.3 for pin assignments.)

2.1.2.4 HDMI Connector

The UNO-2271G V2 provides 1 x HDMI connector for a high resolution interface, 1920 x 1080 @60Hz. (Please refer to User Manual- Appendix A.4 for pin assignments.)

2.1.3 Expansion Kit's Internal Connectors (Optional)

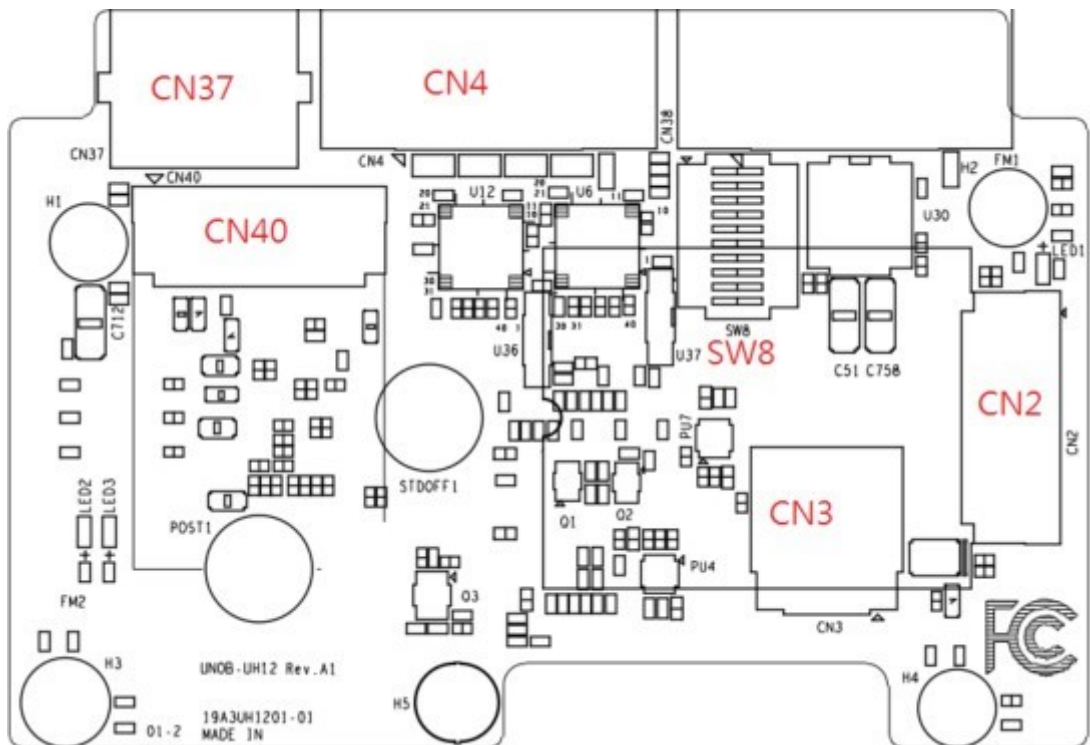


Figure 2.5 Locations Internal I/O Connectors/Switches for UNO-2271G-RS2EA (Top Side) (Optional)

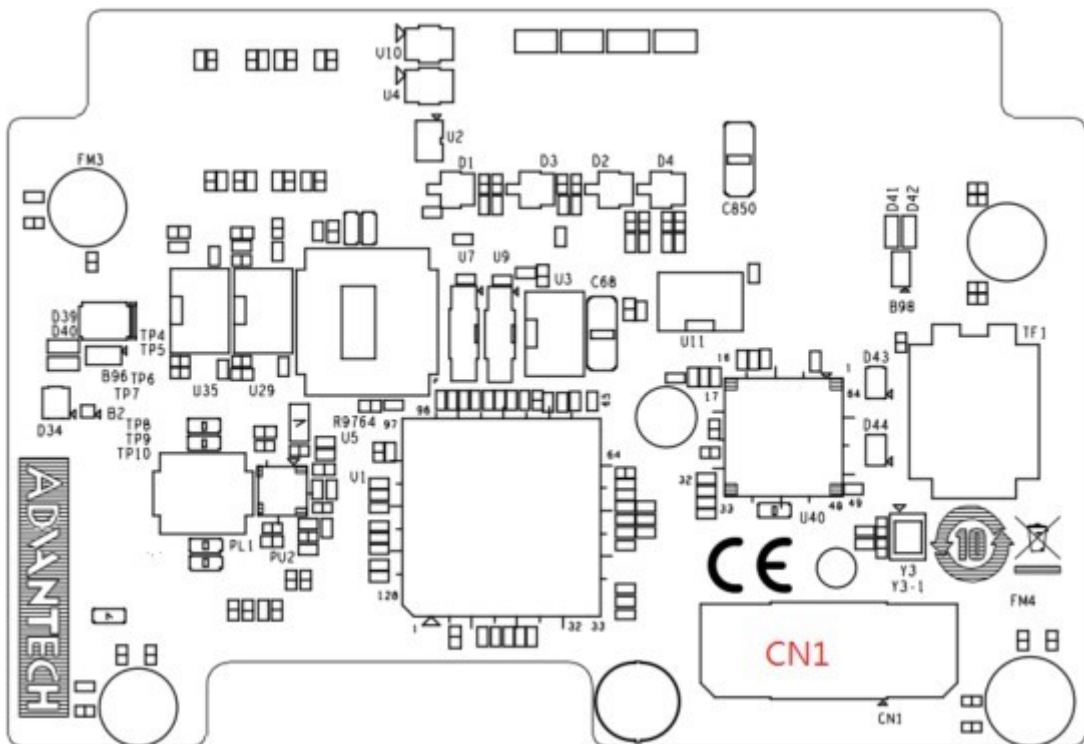


Figure 2.6 Locations Internal I/O Connectors/Switches for UNO-2271G-RS2EA (Bottom Side) (Optional)

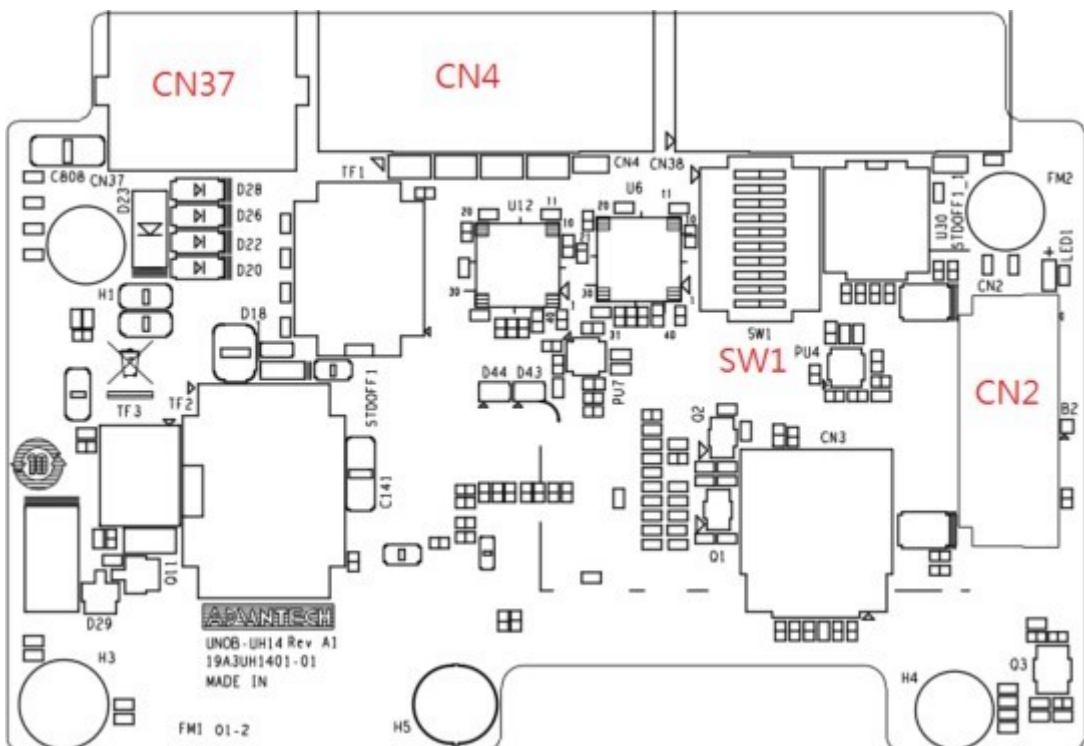


Figure 2.7 Locations Internal I/O Connectors/Switches for UNO-2271G-RP1EA (Top Side) (Optional)

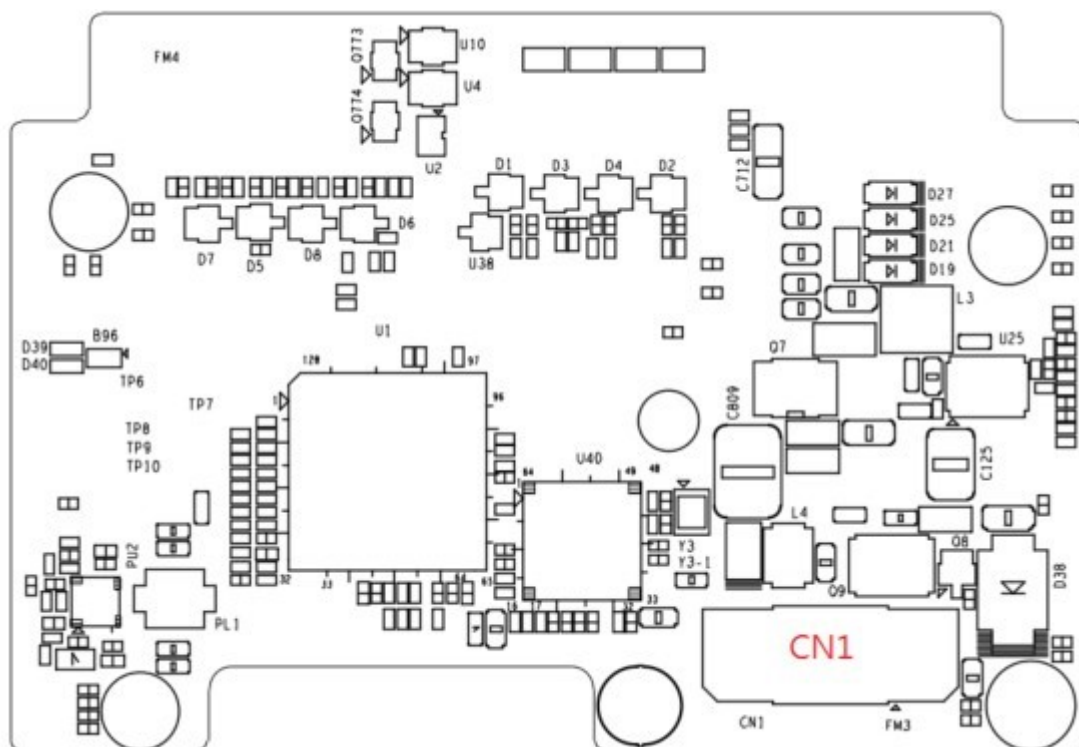


Figure 2.8 Locations Internal I/O Connectors/Switches for UNO-2271G-RP1EA (Bottom Side) (Optional)

Table 2.2: Internal Connectors and Jumper Switches

| Label | Function |
|---------|---|
| CN4 | COM Port Terminal Connector (RS232/422/485) |
| CN37 | LAN Signal Connector |
| CN2 | M.2 B key for 2242/3042/3052 Connector |
| CN40 | M.2 E key for 2230 Connector |
| CN3 | SIM card slot |
| SW8/SW1 | COM port setting switch |
| CN1 | Internal board to board Connector |

2.1.3.1 M.2 B-key Connector

There is one M.2 B Key connector for M.2 cards, labeled “CN2” on the expansion board. This M.2 interface is a SATA signal co-lay with a USB3.0 signal. It will automatically detect which device you installed and determine the appropriate SATA or USB signal to use. Therefore, it supports the installation of M.2 2242 (w/SATA signal) or 3042/3052 module (w/ USB Signal).

(Please refer to user manual-chapter 3.3 & 3.5 for installation details and User Manual-Appendix A.6 for pin assignments.)

2.1.3.2 M.2 E-key Connector

There is one M.2 E Key connector for M.2 cards, labeled “CN40” on the expansion board. This M.2 interface is a PCIe signal and USB2.0 signal. it supports the installation of M.2 2230 WiFi module.

2.1.3.3 mPCIe Connector

There’s one sockets for full size PCI Express mini cards, labeled “CN3” on the board.

It supports iDoor module for diversified applications such as isolated COM port, Pro-fibus, WLAN GPRS, LTE, and MRAM. Users can install the iDoor easily with optional extension kit.

(Please refer to User Manual- Chapter 3.6 for extension kit installation details and User Manual-Appendix A.7 for pin assignments.)

2.1.3.4 Nano SIM Slot

There's one Nano SIM slot for supporting LTE function, labeled "CN3" on board. In addition to install SIM card on "CN3", users are required to install a LTE Module on "CN2" M.2 B Key to enable the functionality.

2.1.3.5 COM Connector

The second stack extension kit of UNO-2271G V2 provides has 2 COM RS232/422/485 ports of terminal block type. They offer transmission speeds of 50 ~115.2 kbps.

The default mode for both COM ports (COM1&COM2) is RS-232 Mode. Settings can be adjusted via an on-board switch (SW1).

(Please refer to User Manual- Appendix A.8 for RS232/422/485 settings).

2.1.4 Others

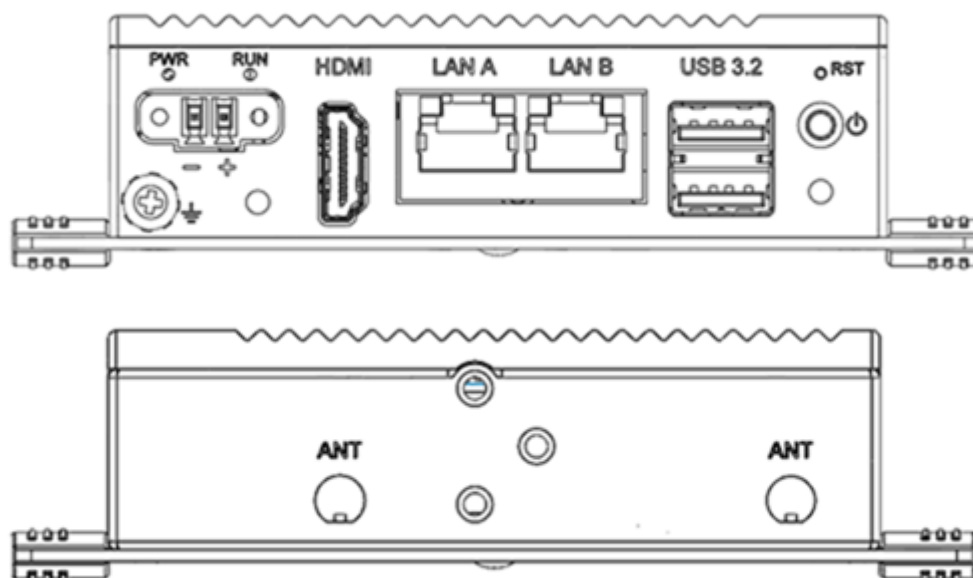


Figure 2.9 LED Indicators, Reset Buttons, and Antenna Hole

2.1.4.1 LED Indicators

Three LEDs indicate the status of the system's power, RTC battery, and programmable LED for user's configurations.

- PWR (Power): Green indicates "normal" and orange indicates "standby".
- RUN (Programmable): Users can configure the LED indicator's behavior through GPO signal controls. Green indicates under programming.

2.1.4.2 Reset Buttons

Press the "Reset" button to initiate a hardware reset.

2.1.4.3 Antenna Hole

This product offers two antenna mounting holes covered by pre-cut holes for users to install an antenna kit for LTE or wireless functions.

Chapter 3

Initial Setup

This chapter explains how to initialize the UNO-2271G V2.

- Chassis Grounding
- Connecting Power
- Open and Close Bottom Cover
- Installing a 2nd Stack Extension Kit
- Installing internal component
- Antenna Installation (Optional)
- BIOS Settings

3.1 Chassis Grounding

The UNO-2271G V2 provides good EMI protection and a stable grounding base and there is an easy-to-connect chassis grounding point for this purpose.

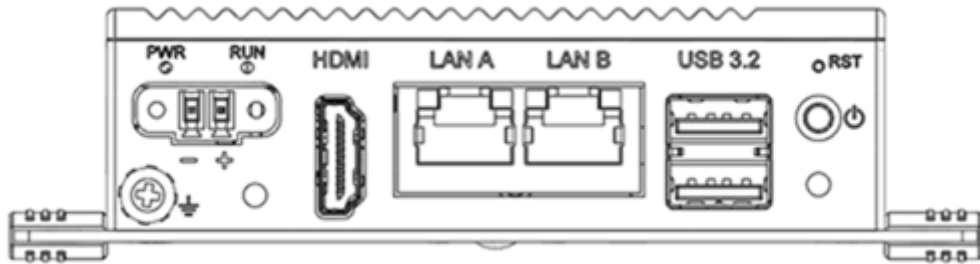


Figure 3.1 Chassis Grounding Connection Diagram

Use the grounding cable (16 AWG) from the accessory bag to connect the chassis ground with the Earth ground.

3.2 Connecting Power

This product is intended to be supplied by an approved power adapter or DC power source. This adapter is rated at 10 - 30dc, 3.5-1.17A and has a Tmax of 60° C (140° F). If you need further assistance or information, please contact Advantech.

Note! *It is recommended to choose a 60W adapter when selected iDoor expansion module (e.g. PCM-24R2PE) is installed. Recommended PN: 96PSA-A120W19T2-3.*




Follow the following instructions:

1. Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.
2. Tighten the wire-clamp screws to prevent the DC wires from coming loose.

Take the following guidelines into consideration before wiring the device:


1. The terminal block is suitable for 16-24 AWG (8A). The torque value is 2.5 lb-in. Use copper conductors only.
2. The temperature rating of the input connection cable should be higher than 105° C (221° F).

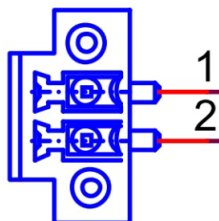


3.3 Open and Close Bottom Cover

The steps for opening and closing the bottom cover of UNO-2271G V2 are demonstrated below.


1. To open the bottom cover: Remove the 5 screws from the back cover and lift it off.

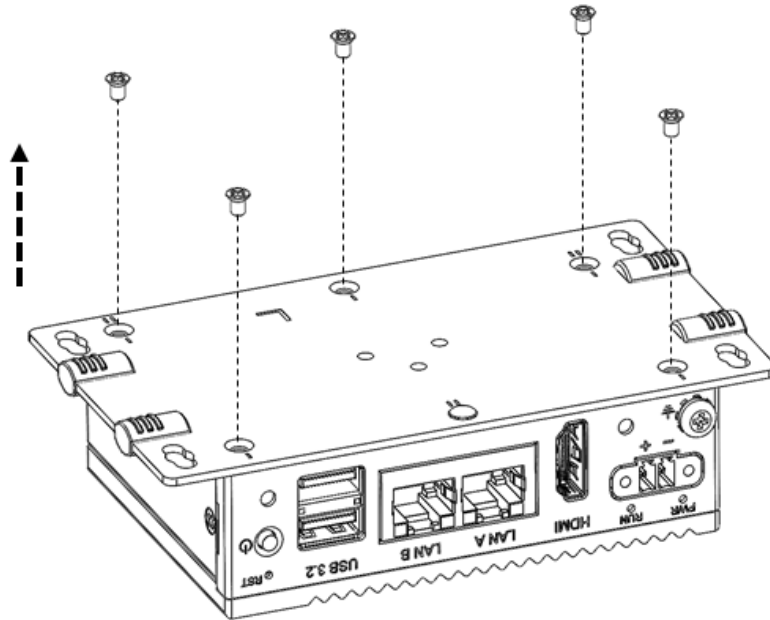

2. To close the bottom cover: Put the bottom cover onto the UNO-2271G V2 chassis.

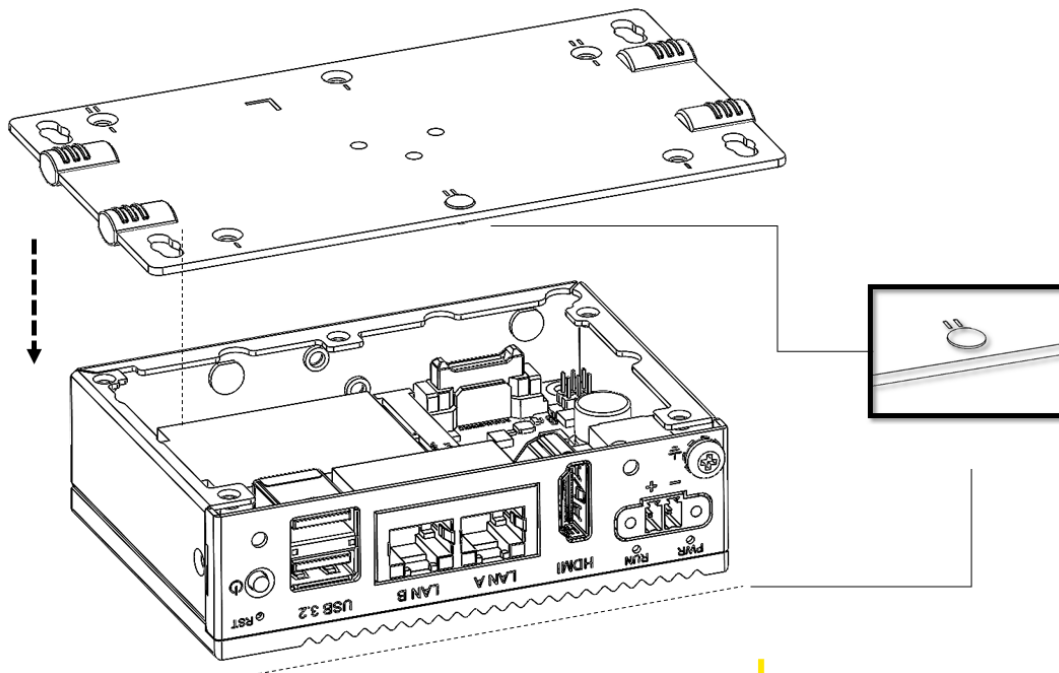


3. Affix the bottom cover with 5 screws.

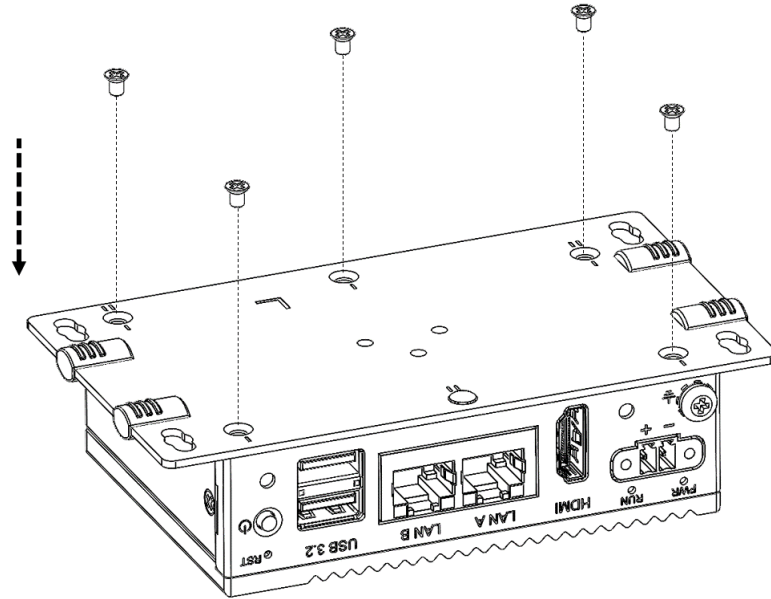


3.4 Installing a 2nd Stack Extension Kit

3.4.1 Installing a 2nd Stack Extension Kit (UNO-2271G-EKBE)


1. Remove the 5 screws and lift the bottom cover.

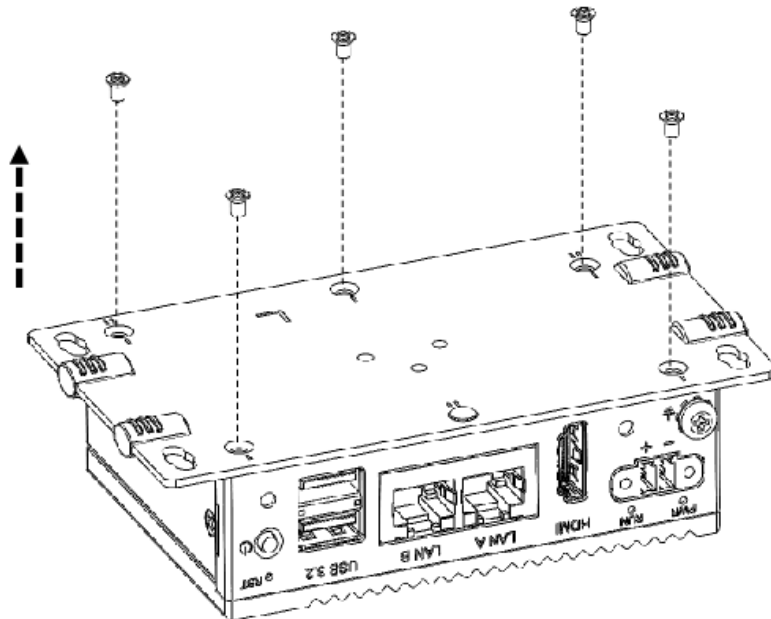


2. Lock the 2nd stack bracket with 5 screws.

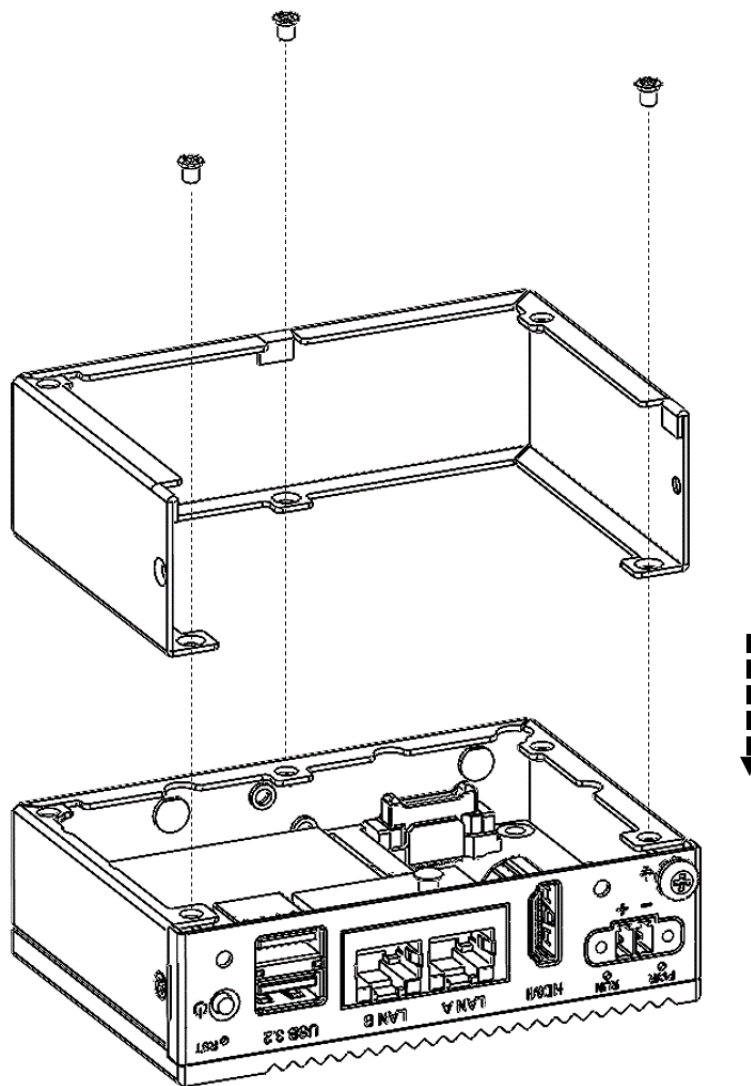

3. Lock the bracket and extension module with 2 screws.

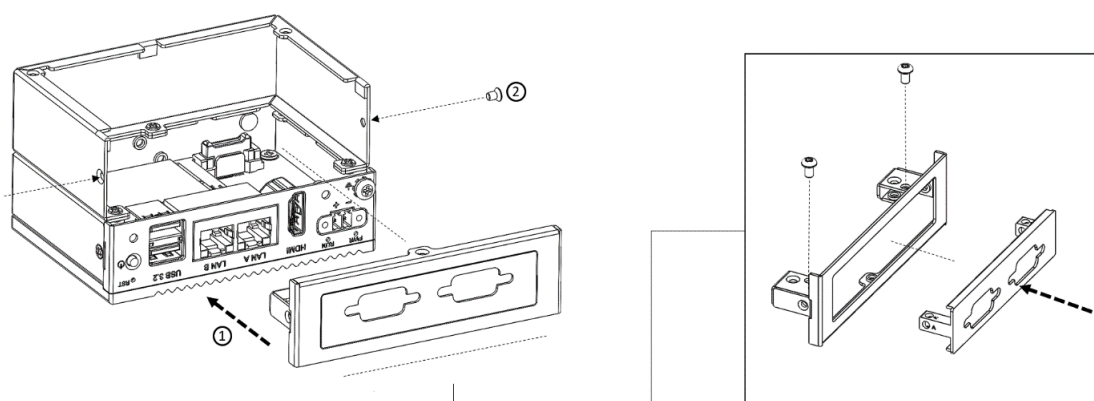


4. Lock the bottom cover with 3 screws and 3 rubbers.

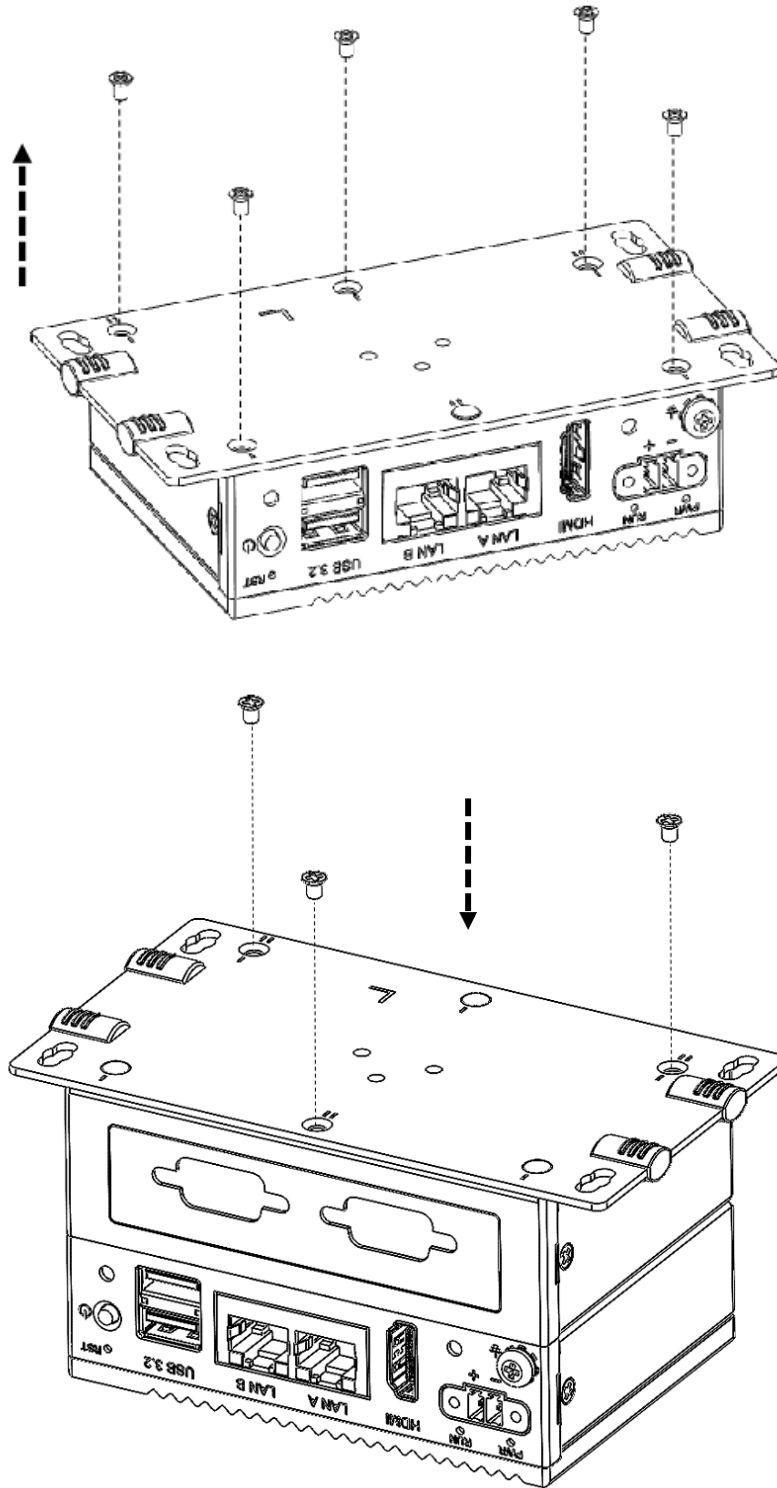


3.4.2 Installing a 2nd Stack Extension Kit (UNO-2271G-RS2EA)


1. Remove 5 screws and lift the bottom cover.

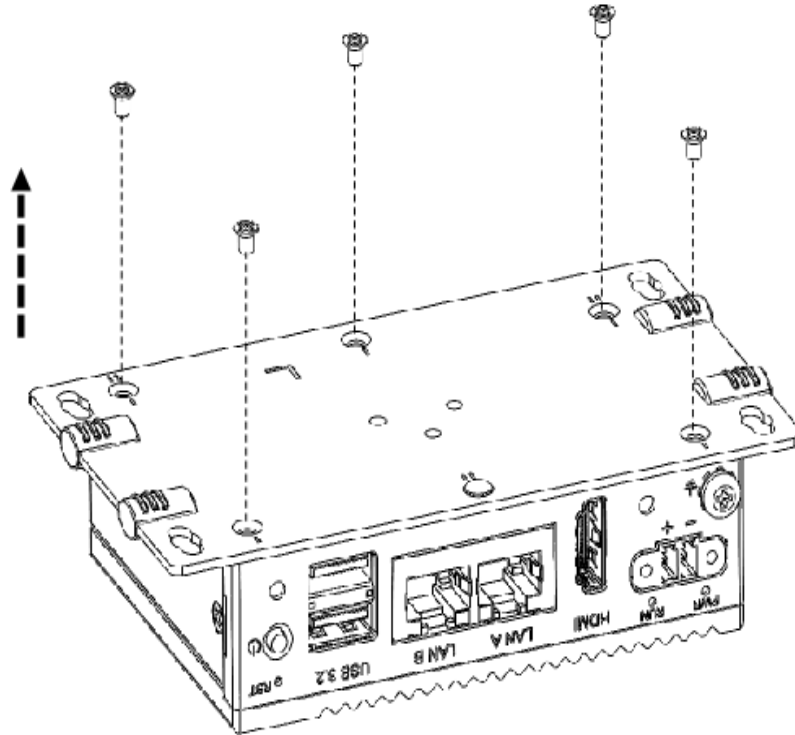

2. Connect to the BTB connector and fix with 3 screws.

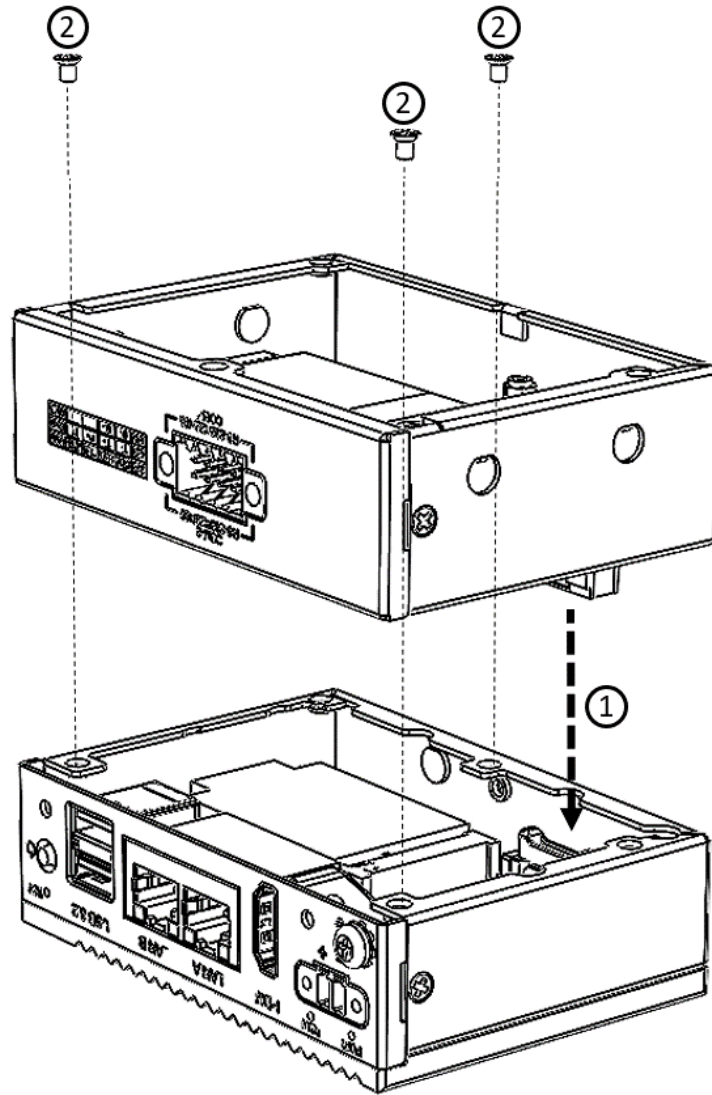


3. Affix the bottom cover with 3 screws.

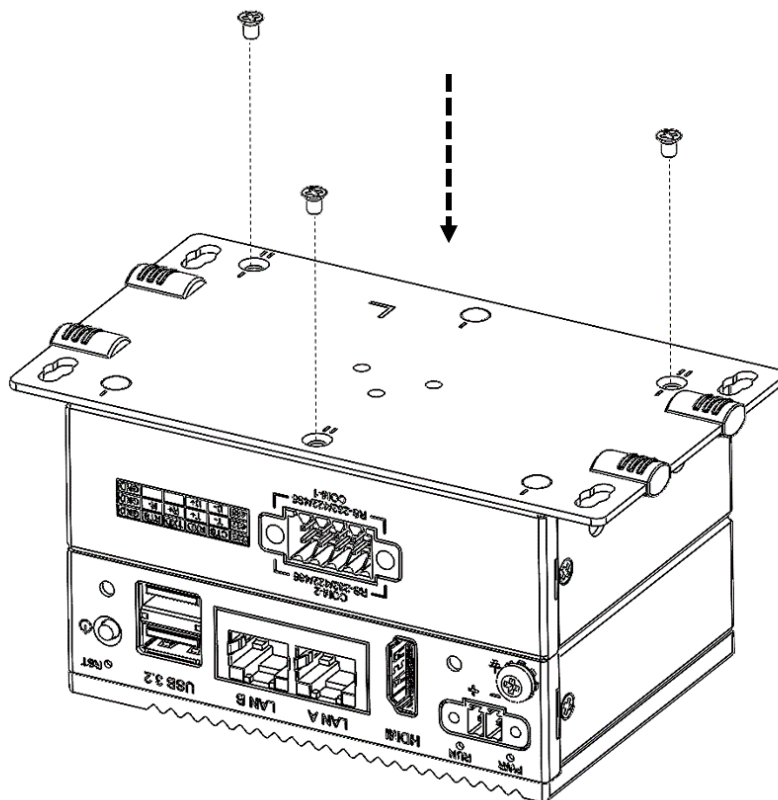


3.4.3 Installing a 2nd Stack Extension Kit (UNO-2271G-RP1EA)


1. Remove 5 screws and lift the bottom cover.

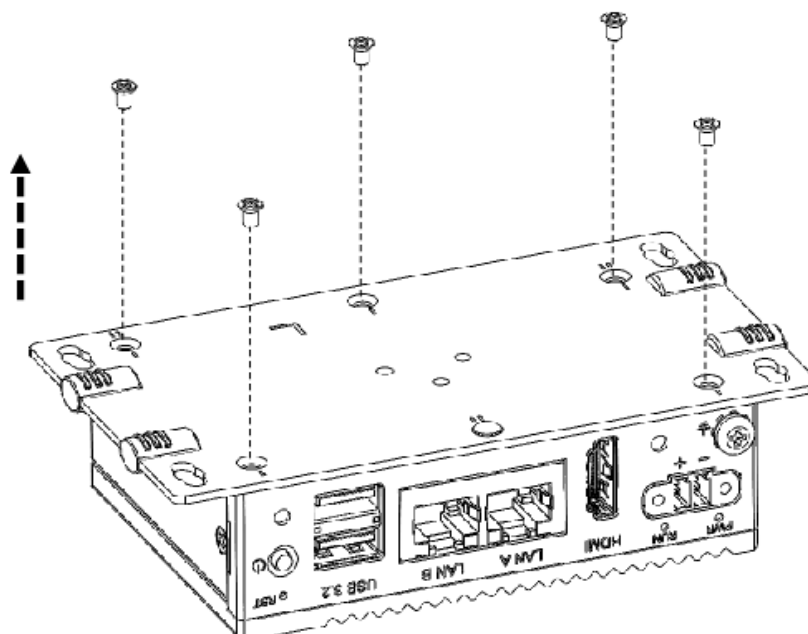

2. Connector to BTB Connector and lock the bottom with 3 screws.

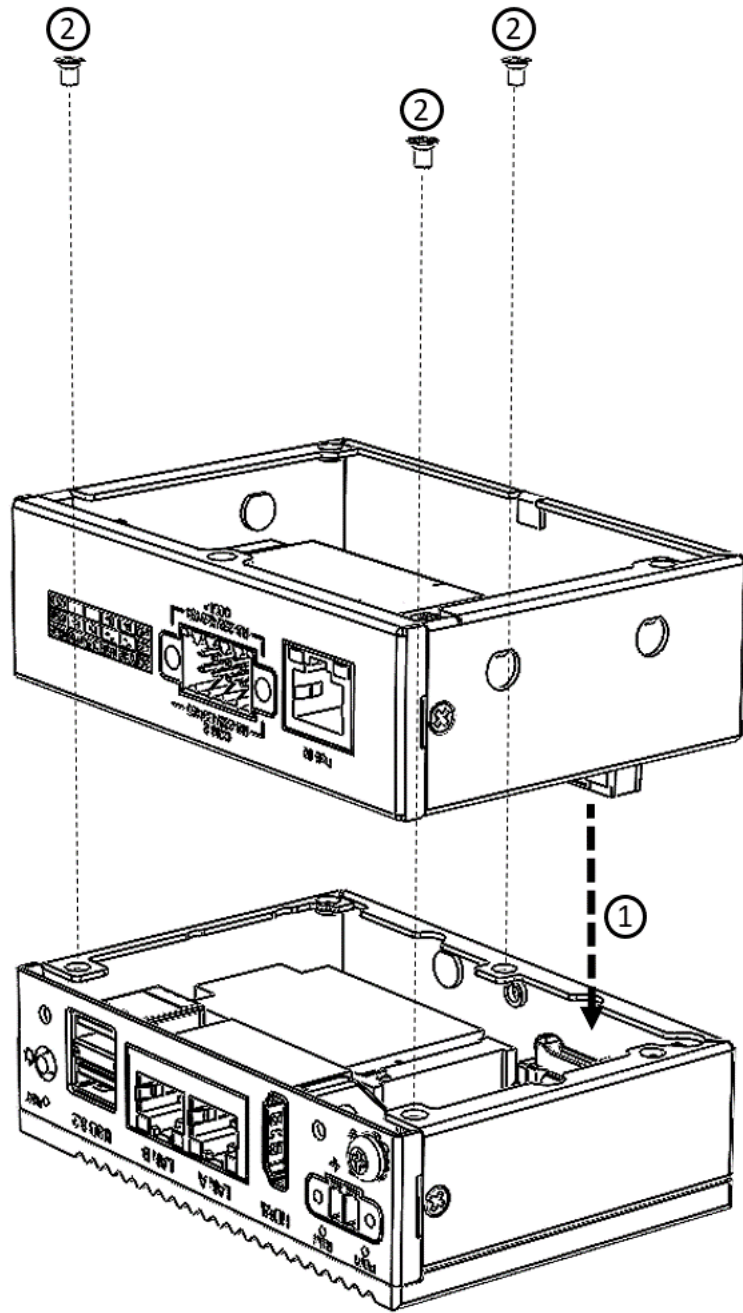


3. Lock the bottom cover with 3 screws.

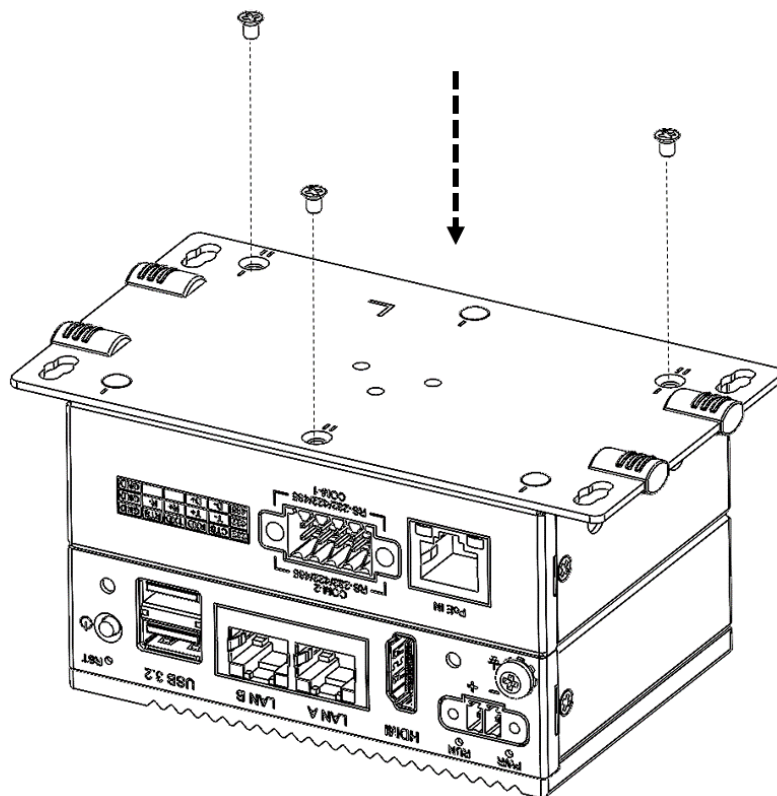


3.5 Installing Internal Component

3.5.1 Installing miniPCIe Module


1. Remove the 5 screws from the back cover of UNO.

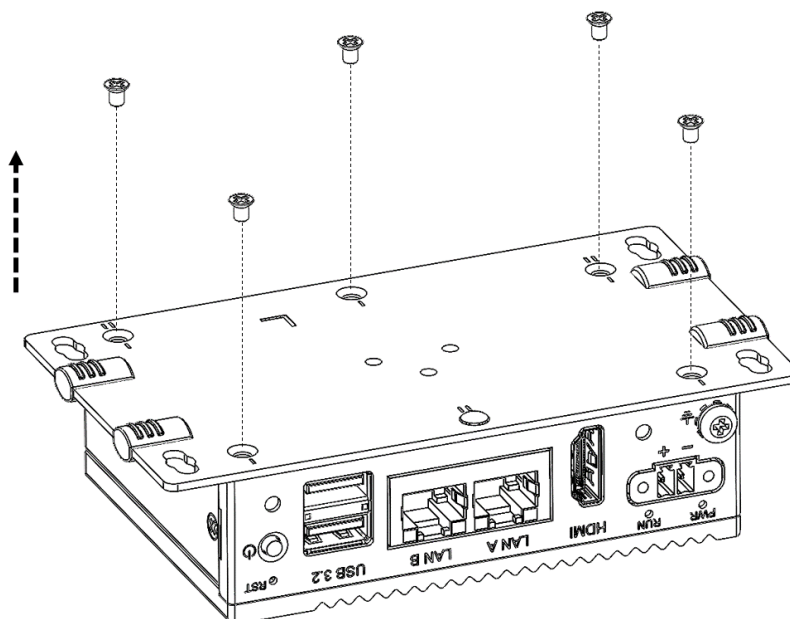

2. Insert the mPCIe card at the location: "CN3".

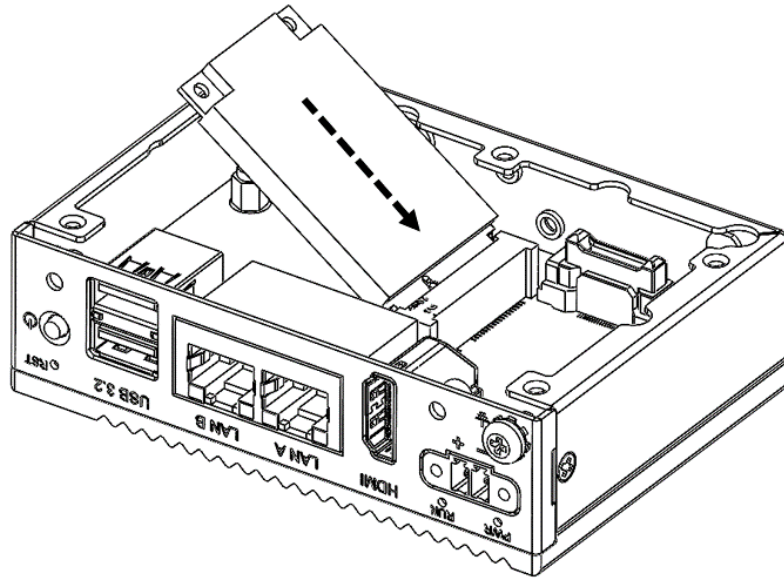


3. Secure it with the provided screws.

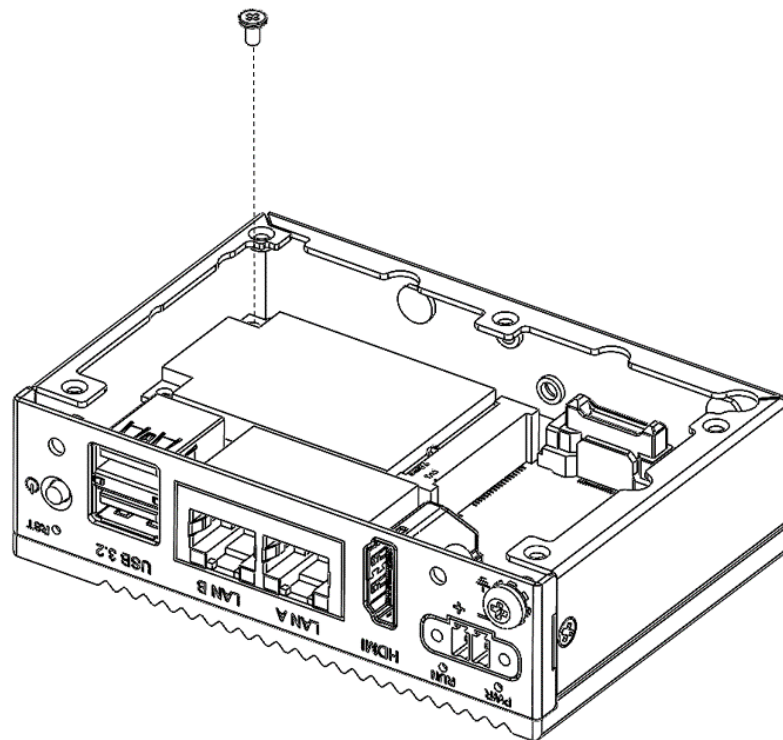


3.5.2 Installing the M.2 B-Key Module on Extension Kit (UNO-2271G-RP1EA/UNO-2271G-RS2EA)

Installing M.2 3042 card

1. Remove the pre-installed screw.

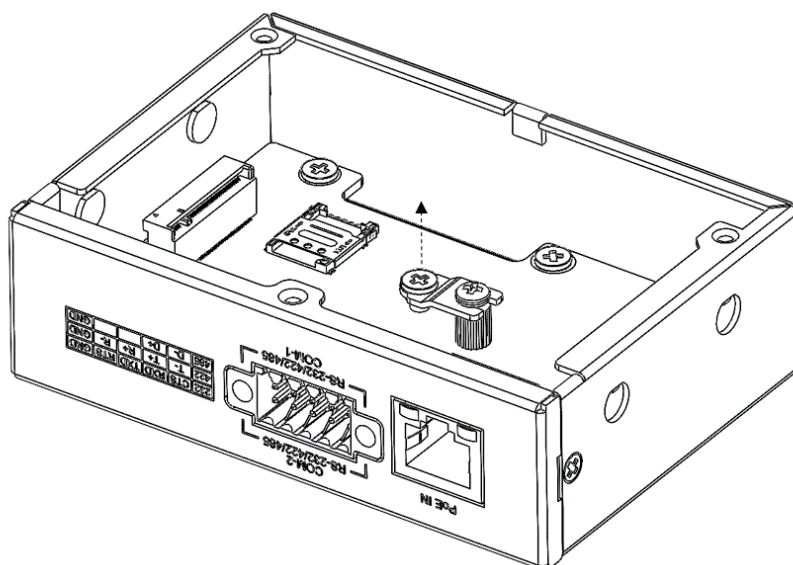


2. Insert the M.2 3042 card at the location of “CN2” and lock the screw.

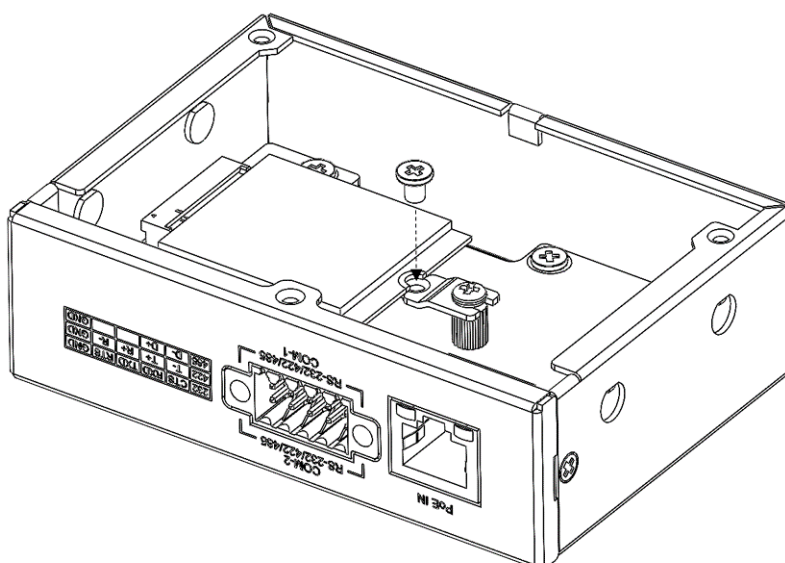


Installing M.2 3052 card

1. Remove the pre-installed screw.

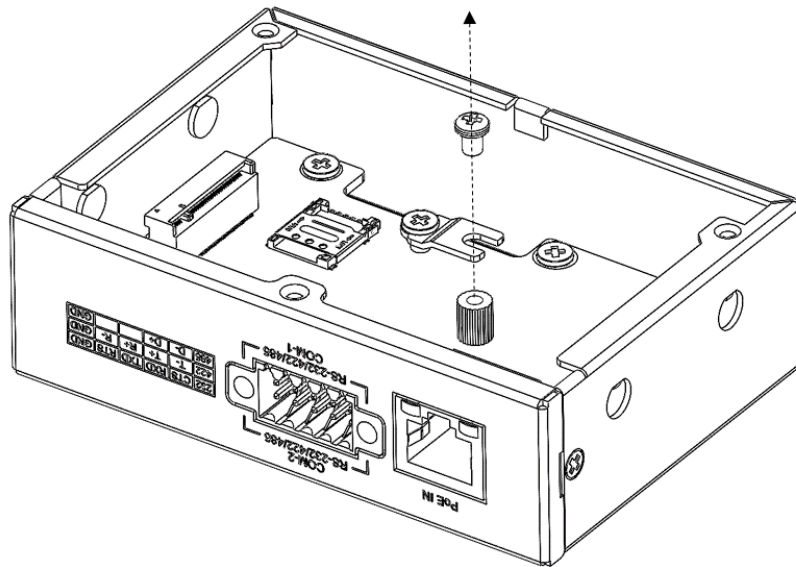


2. Insert the M.2 3042 card at the location of “CN2” and lock the screw.

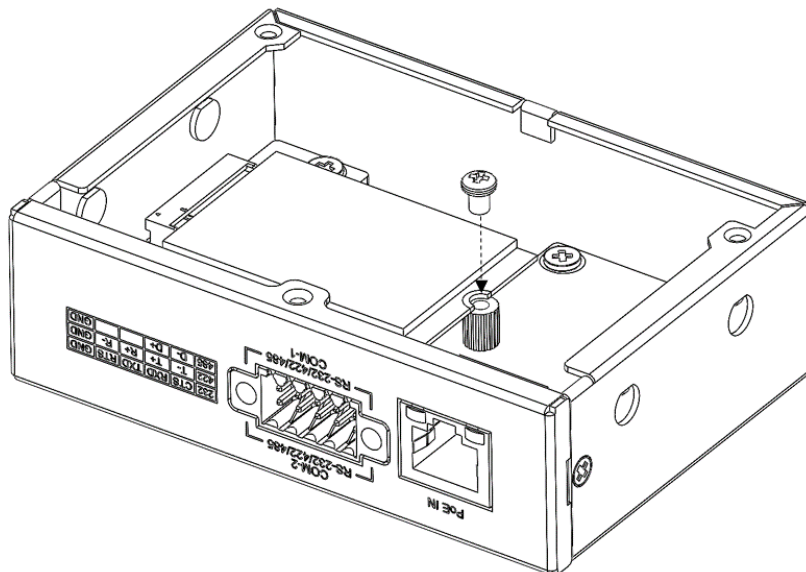


3.5.3 Installing the M.2 E-key Module on Extension Kit (UNO-2271G-RS2EA)

Installing M.2 2230 card

1. Remove the pre-installed screw.

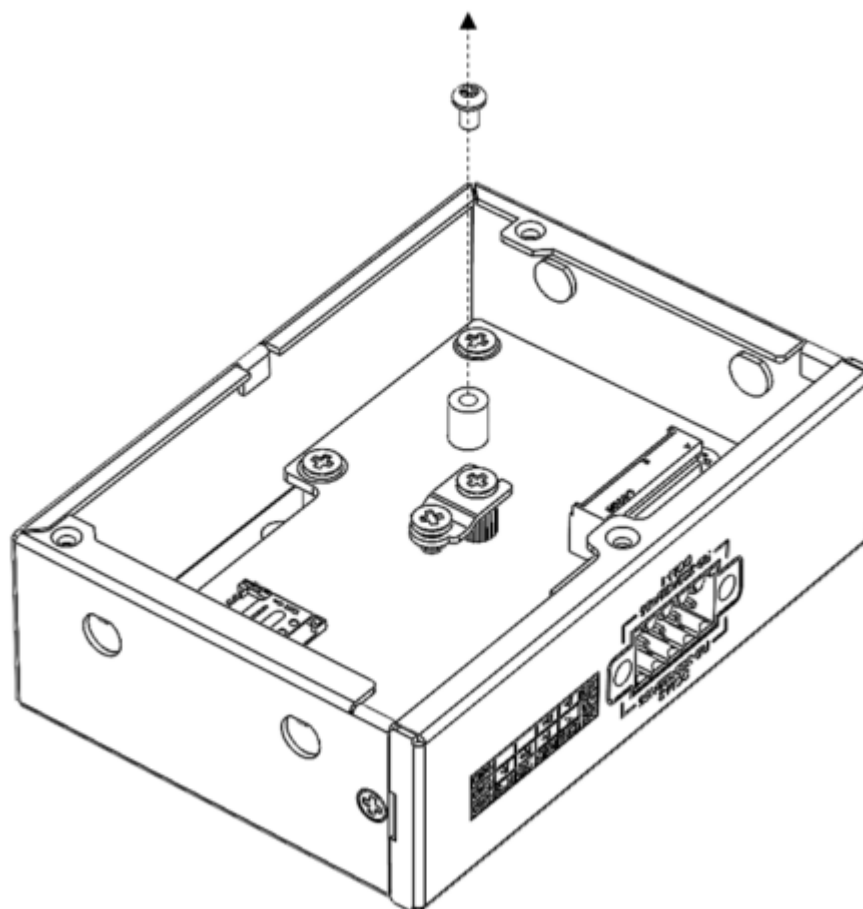


2. Insert the M.2 2230 card at the location of “CN40” and lock the screw.

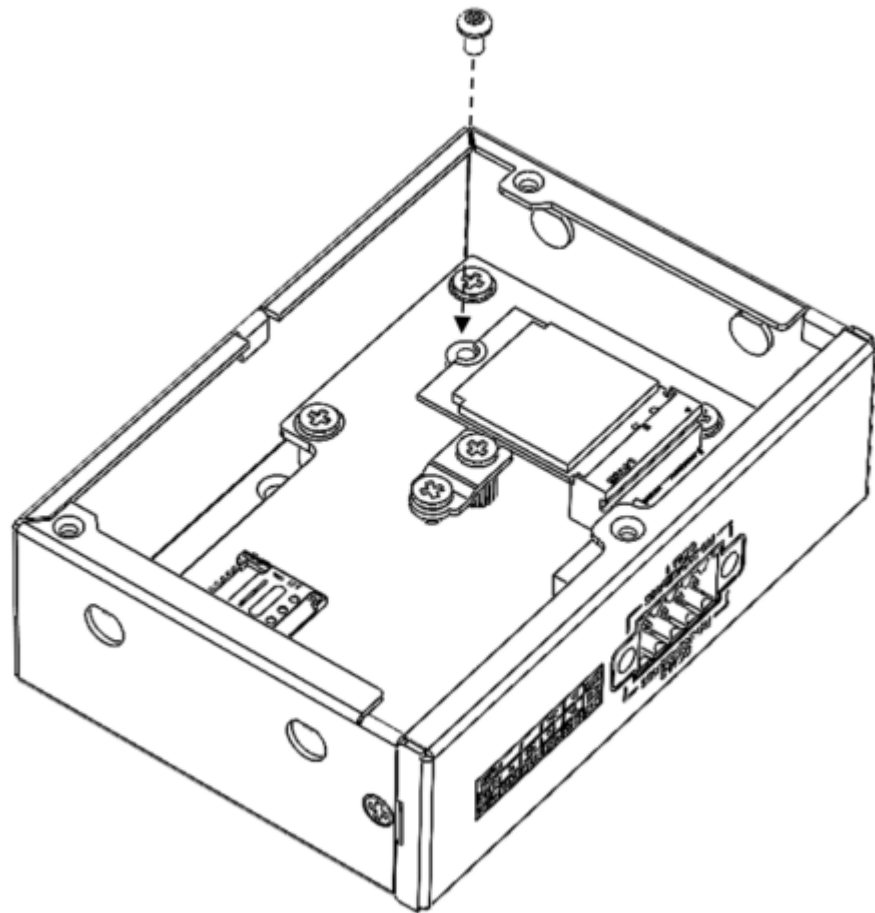


3.6 Antenna Installation (Optional)

UNO-2271G V2 reserves pre-cut antenna hole for wireless connection. Follow the steps below for installation the SMA cable and antenna.


1. Remove the 5 screws from the back cover of UNO.

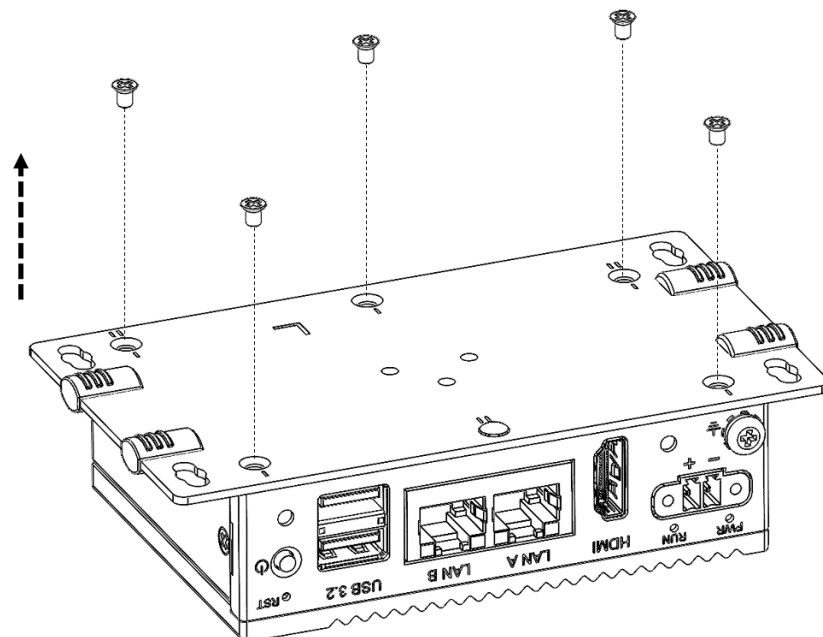

2. Remove the plug of the antenna's pre-cut hole(s) on the rear panel.

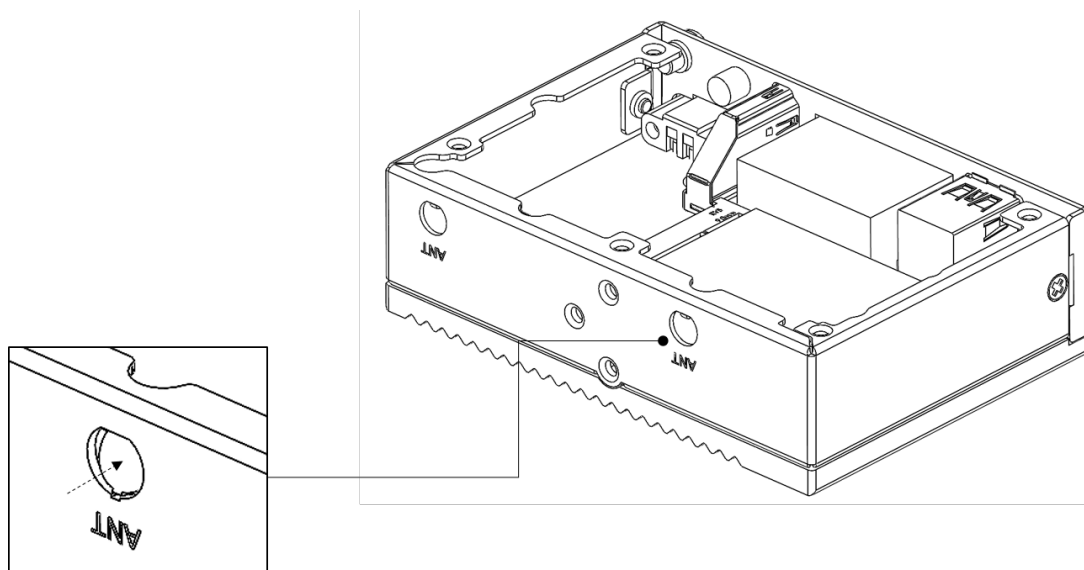

3. Assemble SMA cable on the pre-cut hole.

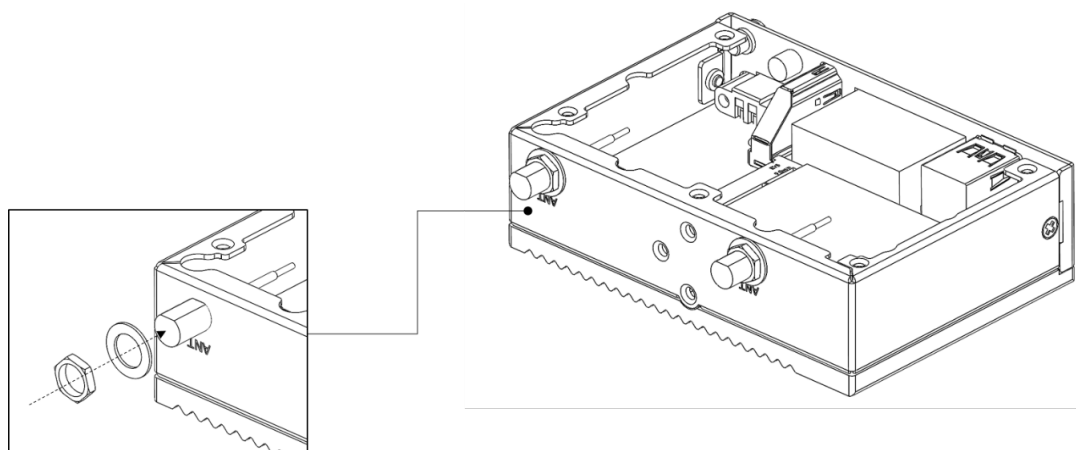

4. Assemble the antenna on the SMA connector of the antenna cable.

3.7 BIOS Setting

With the BIOS Setup program, you can modify BIOS settings and control the special features of your computer. The Setup program uses a number of menus for making changes and turning special features on or off.

Press the "ESC" key upon the first boot up to enter the BIOS setup screen, after then, press the "Del" key during the Power On Self Test (POST) process to enter the BIOS setup screen, otherwise the system will continue the POST process.

(Please refer to User Manual- Appendix A.11/ A.1)

Appendix **A**

System Settings/Pin
Assignments

A.1 Power Connector (DCIN1)



Table A.1: Power Connector Pin Assignments

| Pin | Signal | Description |
|-----|-------------------|-------------------------|
| 1 | Power IN V+ | 10 - 30 V _{DC} |
| 2 | Power IN V- (GND) | |

A.2 LAN: Ethernet Connector (LAN1)

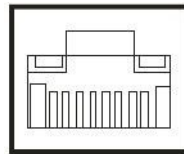



Table A.2: Ethernet Connector Pin Assignments

| RJ45 Pin | Signal | Description |
|----------|--------|---|
| 1 | MDI0+ | <ul style="list-style-type: none"> ■ In BASE-T: Media Dependent Interface[0]: ■ 1000BASE-T: In MDI configuration, MDI[0]+/- corresponds to BI_DA+/- and in MDI-X configuration MDI[0]+/- corresponds to BI_DB+/-. ■ 10BASE-T and 100BASE-TX: In MDI configuration, MDI[0]+/- is used for the transmit pair and in MDIX configuration MDI[0]+/- is used for the receive pair. |
| 2 | MDI0- | |
| 3 | MDI1+ | <ul style="list-style-type: none"> ■ In BASE-T: Media Dependent Interface[1]: ■ 1000BASE-T: In MDI configuration, MDI[1]+/- corresponds to BI_DB+/- and in MDI-X configuration MDI[1]+/- corresponds to BI_DA+/-. ■ 10BASE-T and 100BASE-TX: In MDI configuration MDI[1]+/- is used for the receive pair and in MDI-X configuration MDI[1]+/- is used for the transmit pair. |
| 6 | MDI1- | |
| 4 | MDI2+ | <ul style="list-style-type: none"> ■ In BASE-T: Media Dependent Interface[3:2]: ■ 1000BASE-T: In MDI and in MDI-X configuration, MDI[2]+/- corresponds to BI_DC+/- and MDI[3]+/- corresponds to BI_DD+/-. ■ 100BASE-TX: Unused. ■ 10BASE-T: Unused. |
| 5 | MDI2- | |
| 7 | MDI3+ | |
| 8 | MDI3- | |

| Left LED | | | Right LED |
|----------|----------|-----------|-----------|
| 10 Link | 100 Link | 1000 Link | Active |
| Off | Orange | Green | Green |

A.3 USB Connector (USB1)

A.3.1 USB 3.0 Connector

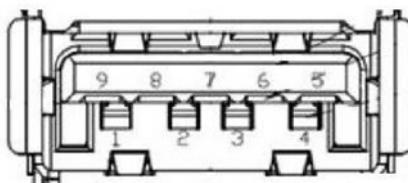

| Table A.3: USB 3.0 Connector Pin Assignments | | |
|--|-------------|--|
| Pin | Signal Name | Description |
| 1 | VBUS | Power |
| 2 | D- | USB 2.0 differential pair |
| 3 | D+ | |
| 4 | GND | Ground for power return |
| 5 | StdA_SSRX- | SuperSpeed receiver differential pair |
| 6 | StdA_SSRX+ | |
| 7 | GND_DRIAN | Ground for signal return |
| 8 | StdA_SSTX- | SuperSpeed transmitter differential pair |
| 9 | StdA_SSTX+ | |

A.4 HDMI Connector (CN1)

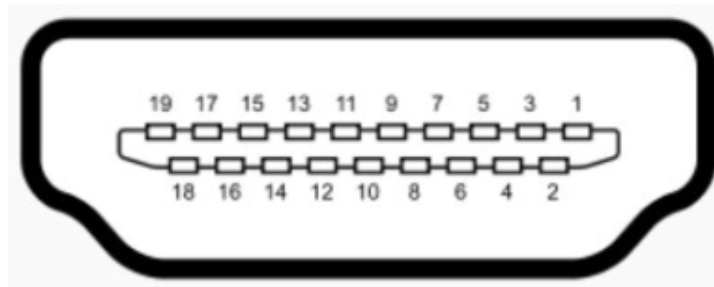


Table A.4: Display Port Adapter Cable Pin Assignments

| Pin | Signal Name |
|-----|---------------|
| 1 | TMDS1_a_P0 |
| 2 | GND |
| 3 | TMDS1_a_N0 |
| 4 | TMDS1_a_P1 |
| 5 | GND |
| 6 | TMDS1_a_N1 |
| 7 | TMDS1_a_P2 |
| 8 | GND |
| 9 | TMDS1_a_N2 |
| 10 | TMDS1_CLK_a_P |
| 11 | GND |
| 12 | TMDS1_CLK_a_N |
| 13 | NC |
| 14 | NC |
| 15 | TMDS1_DDCCLK |
| 16 | TMDS1_DDCDAT |
| 17 | GND |
| 18 | +V5 |
| 19 | TMDS1_HPD |

A.5 M.2 B-key Connector (CN2)

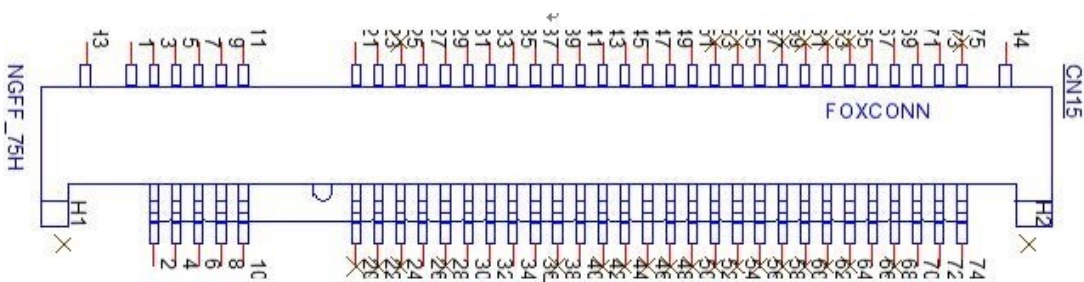


Table A.5: M.2 B Key Connector Pin Assignments

| Pin | Signal Name | Pin | Signal Name |
|-----|--------------------|-----|---------------------|
| 1 | M2_SATA1_DET | 2 | +V3.3_M2 |
| 3 | GND | 4 | +V3.3_M2 |
| 5 | GND | 6 | M2_LTE_PWR_OFF# |
| 7 | M2_LTE_USB_DP | 8 | M2_LTE_W1_DISABLE_N |
| 9 | M2_LTE_USB_DN | 10 | +V3.3_M2 |
| 11 | GND | 12 | Mechanical notch B |
| 13 | Mechanical notch B | 14 | Mechanical notch B |
| 15 | Mechanical notch B | 16 | Mechanical notch B |
| 17 | Mechanical notch B | 18 | Mechanical notch B |
| 19 | Mechanical notch B | 20 | NC |
| 21 | NC | 22 | NC |
| 23 | WAKE_ON_WAN# | 24 | NC |
| 25 | NC | 26 | M2_LTE_W2_DISABLE_N |
| 27 | GND | 28 | NC |
| 29 | USB_Z_SSRX1- | 30 | M2_SIM1_RESET |
| 31 | USB_Z_SSRX1+ | 32 | M2_SIM1_CLK |
| 33 | GND | 34 | M2_SIM1_DATA |
| 35 | USB_C_SSTX1- | 36 | M2_SIM1_PWR |
| 37 | USB_C_SSTX1+ | 38 | NC |
| 39 | GND | 40 | M2_SIM2_DET |
| 41 | SATA1_RX+ | 42 | NC |
| 43 | SATA1_RX- | 44 | NC |
| 45 | GND | 46 | NC |
| 47 | SATA1_C_TX- | 48 | NC |
| 49 | SATA1_C_TX+ | 50 | NC |
| 51 | GND | 52 | NC |
| 53 | NC | 54 | NC |
| 55 | NC | 56 | NC |
| 57 | GND | 58 | NC |
| 59 | NC | 60 | NC |
| 61 | NC | 62 | NC |
| 63 | NC | 64 | NC |
| 65 | NC | 66 | M2_SIM1_DET |
| 67 | LTE_RST#_P67 | 68 | NC |

Table A.5: M.2 B Key Connector Pin Assignments

| | | | |
|----|-----|----|----------|
| 69 | NC | 70 | +V3.3_M2 |
| 71 | GND | 72 | +V3.3_M2 |
| 73 | GND | 74 | +V3.3_M2 |
| 75 | NC | | |

A.6 M.2 E-Key Connector (CN40)


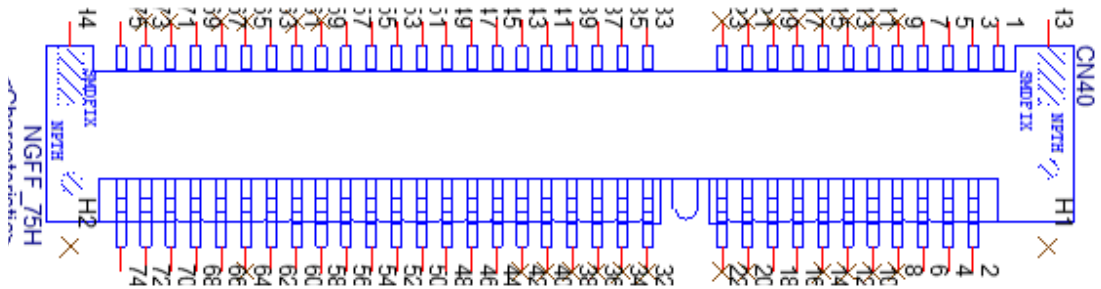


Table A.6: M.2 E key Connector Pin Assignments

| Pin | Signal Name | Pin | Signal Name |
|-----|--------------------|-----|--------------------|
| 1 | GND | 2 | +V3.3SB_M2E |
| 3 | M2E_USB_D+ | 4 | +V3.3SB_M2E |
| 5 | M2E_USB_D- | 6 | M2E_LED_1# |
| 7 | GND | 8 | NC |
| 9 | NC | 10 | NC |
| 11 | NC | 12 | NC |
| 13 | NC | 14 | NC |
| 15 | NC | 16 | M2E_LED_2# |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | NC |
| 21 | NC | 22 | NC |
| 23 | NC | 24 | Mechanical notch E |
| 25 | Mechanical notch E | 26 | Mechanical notch E |
| 27 | Mechanical notch E | 28 | Mechanical notch E |
| 29 | Mechanical notch E | 30 | Mechanical notch E |
| 31 | Mechanical notch E | 32 | NC |
| 33 | GND | 34 | NC |
| 35 | PCIE_M2_TX1+ | 36 | NC |
| 37 | PCIE_M2_TX1- | 38 | NC |
| 39 | GND | 40 | NC |
| 41 | PCIE_M2_RX1+ | 42 | NC |
| 43 | PCIE_M2_RX1- | 44 | NC |
| 45 | GND | 46 | NC |
| 47 | CLK_M2_PCIE1+ | 48 | NC |
| 49 | CLK_M2_PCIE1- | 50 | M2E_SUSCLK |
| 51 | GND | 52 | M2E_PERST0# |
| 53 | M2E_CLKREQ0# | 54 | M2E_z_W_DISABLE2# |
| 55 | M2E_PEWAKE0# | 56 | M2E_z_W_DISABLE1# |

| Table A.6: M.2 E key Connector Pin Assignments | | | |
|--|-----|----|--------------|
| 57 | GND | 58 | M2E_I2C_DATA |
| 59 | NC | 60 | M2E_I2C_CLK |
| 61 | NC | 62 | M2E_ALERT# |
| 63 | GND | 64 | NC |
| 65 | NC | 66 | M2E_PERST1# |
| 67 | NC | 68 | M2E_CLKREQ1# |
| 69 | GND | 70 | M2E_PEWAKE1# |
| 71 | NC | 72 | +V3.3SB_M2E |
| 73 | NC | 74 | +V3.3SB_M2E |
| 75 | GND | | |

A.7 mPCIe Connector (MINI1)

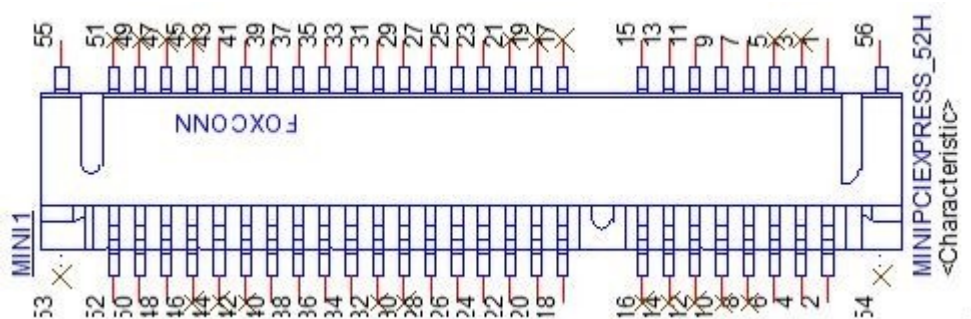

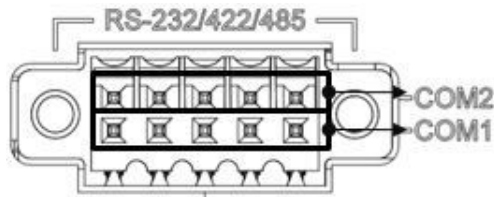
| Table A.7: mPCIe Connector Pin Assignments | | | |
|--|--------------------|-----|---------------|
| Pin | Signal Name | Pin | Signal Name |
| 1 | PCIE_WAKE# | 2 | +V3.3_MINI |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | +V1.5 |
| 7 | PCIEX1_CLKREQ0# | 8 | NC |
| 9 | GND | 10 | NC |
| 11 | CLK100M_PCIEX1_D0- | 12 | NC |
| 13 | CLK100M_PCIEX1_D0+ | 14 | NC |
| 15 | GND | 16 | NC |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | WIFI_DISABLE# |
| 21 | NC | 22 | MINI_PLTRST# |
| 23 | SATA0_RX+ | 24 | +V3.3_MINI |
| 25 | SATA0_RX- | 26 | GND |
| 27 | GND | 28 | +V1.5 |
| 29 | GND | 30 | NC |
| 31 | SATA0_TX- | 32 | NC |
| 33 | SATA0_TX+ | 34 | GND |
| 35 | GND | 36 | USB2_MPCI_P8- |
| 37 | GND | 38 | USB2_MPCI_P8+ |
| 39 | +V3.3_MINI | 40 | GND |
| 41 | +V3.3_MINI | 42 | NC |

Table A.7: mPCIe Connector Pin Assignments

| | | | |
|----|-------------------|----|------------|
| 43 | MPCIE_PWRSEL | 44 | NC |
| 45 | NC | 46 | NC |
| 47 | NC | 48 | +V1.5 |
| 49 | NC | 50 | GND |
| 51 | MSATA#_z_PCIE_SEL | 52 | +V3.3_MINI |








A.8 COM Port RS232/422/485 Settings

The default setting for the COM port is RS-232. This can be changed to RS-422 or RS-485 modes can be configured by adjusting switch on the motherboard.

**Table A.8: COM Connector Pin Assignments**

| Pin | COM1 Mode | Signal Name | Pin | COM2 Mode | Signal Name |
|-----|-----------|-------------|-----|-----------|-------------|
| 1 | RS232 | CTS | 2 | RS232 | CTS |
| | RS422 | T- | | RS422 | T- |
| | RS485 | D- | | RS485 | D- |
| 3 | RS232 | RXD | 4 | RS232 | RXD |
| | RS422 | T+ | | RS422 | T+ |
| | RS485 | D+ | | RS485 | D+ |
| 5 | RS232 | TXD | 6 | RS232 | TXD |
| | RS422 | R+ | | RS422 | R+ |
| | RS485 | | | RS485 | |
| 7 | RS232 | RTS | 8 | RS232 | RTS |
| | RS422 | R- | | RS422 | R- |
| | RS485 | | | RS485 | |
| 9 | RS232 | GND | 10 | RS232 | GND |
| | RS422 | GND | | RS422 | GND |
| | RS485 | GND | | RS485 | GND |

A.8.1 RS232/422/485 Setting (SW8/SW1)
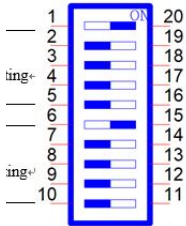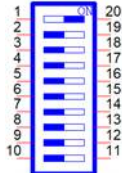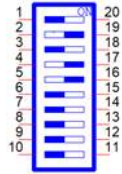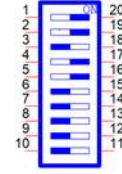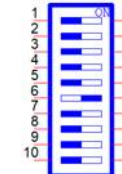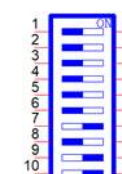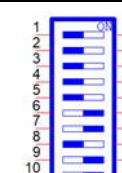
| | | | |
|--------------------|-------------------|---|---|
| SW1 Default | |  | |
| Description | | This switch is used to select RS232/422/485 mode setting | |
| Default | | RS232 mode | |
| COM1 | RS232 Mode | Bit 1 ON Bit 2,3,4,5,6,7,8,9,10 OFF |  |
| | RS485 Mode | Bit 2,4,5 ON Bit 1,3,6,7,8,9,10 OFF |  |
| | RS422 Mode | Bit 1,2,4,5 ON Bit 3,6,7,8,9,10 OFF |  |
| COM2 | RS232 Mode | Bit 6 ON Bit 1,2,3,4,5,7,8,9,10 OFF |  |
| | RS485 Mode | Bit 7,9,10 ON Bit 1,2,3,4,5,7,8 OFF |  |
| | RS422 Mode | Bit 6,7,9,10 ON Bit 1,2,3,4,5,8 OFF |  |

A.8.2 COM Port RS422/485 Termination Resistor Setting

| | | |
|--------------------|---|--|
| SW1 | Termination Resistor Setting | |
| Description | This switch is used to select Termination Resistor (120 ohm) for long distance transmission or device matching. | |
| Default | Bit3 off & Bit8 off | |
| COM1 | Bit3 on | |
| COM2 | Bit8 on | |

A.9 AT/ATX Setting (PSON1)

PSON1 can be used for AT/ATX setting. The default setting is ATX mode. See the following table for jumper configuration

| | | |
|-----|-----|---------|
| AT | 1-2 | |
| ATX | 2-3 | Default |




A.10 Board to Board Connector (Reserved for Expansion) (CN13)

| Table A.9: Expansion Board to Board Connector Pin Assignments | | | |
|---|------------------|-----|------------------|
| Pin | Signal Name | Pin | Signal Name |
| 1 | ESPI_CLK | 2 | ESPI_ALERT0# |
| 3 | ESPI_IO0 | 4 | ESPI_IO1 |
| 5 | ESPI_IO2 | 6 | ESPI_IO3 |
| 7 | ESPI_CS0# | 8 | ESPI_RST0# |
| 9 | PMC_SUSCLK | 10 | PMC_SLP_S3# |
| 11 | GP_H00 | 12 | PCIE_WAKE# |
| 13 | PLTRST_M.2# | 14 | M2B1_CLKREQ2# |
| 15 | GND | 16 | USB2_P0+ |
| 17 | USB2_P0- | 18 | GND |
| 19 | USB2_P4+ | 20 | USB2_P4- |
| 21 | CLK100M_M2E1_D2+ | 22 | CLK100M_M2E1_D2- |
| 23 | GND | 24 | PCIE4_TX+ |
| 25 | PCIE4_TX- | 26 | GND |
| 27 | PCIE4_RX+ | 28 | PCIE4_RX- |
| 29 | GND | 30 | SATA1_TX+ |
| 31 | SATA1_TX- | 32 | GND |
| 33 | SATA1_RX+ | 34 | SATA1_RX- |
| 35 | GND | 36 | USB31_P2_TX+ |
| 37 | USB31_P2_TX- | 38 | GND |
| 39 | USB31_P2_RX+ | 40 | USB31_P2_RX- |


A.11 TPM 2.0 BIOS Setting

The UNO-2271G V2 systems support TPM 2.0 functionality. This can be enabled or disabled in the BIOS menu by following the instructions provided below:

1. Power on the UNO-2271G V2 system and press “Delete” to enter the BIOS configuration menu.
2. On the “Advanced” tab, select the “Trusted Computing” item.

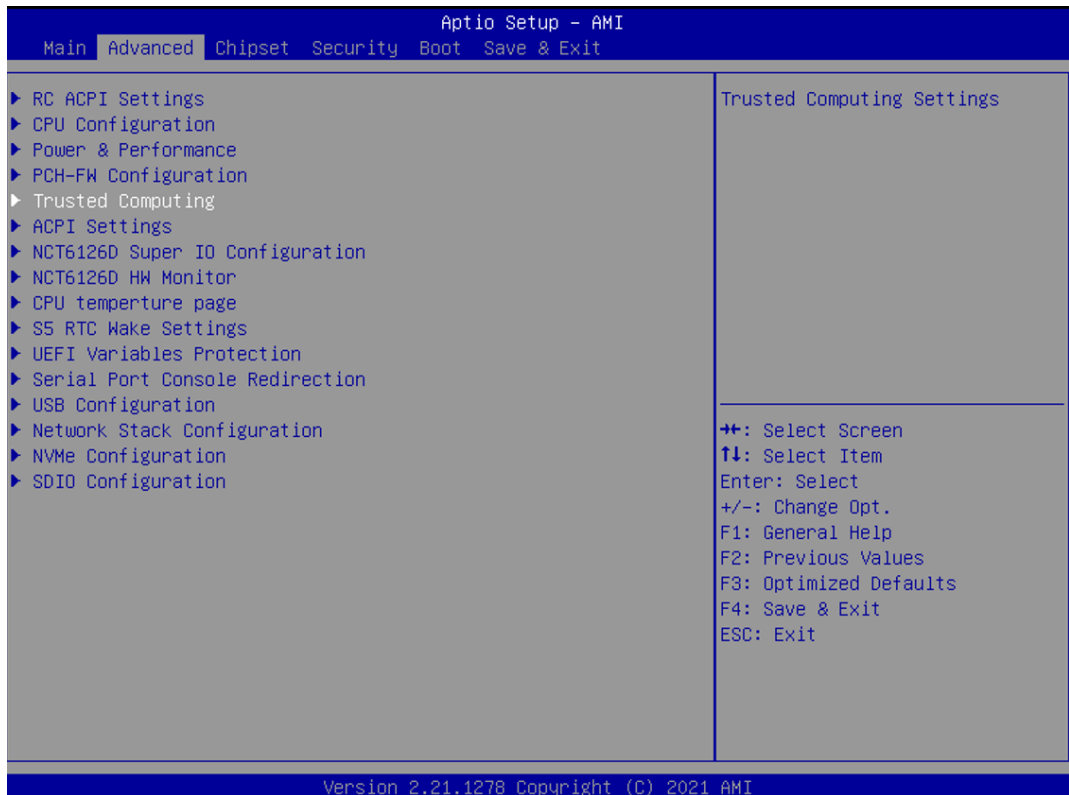



3. Then select the “Security Device Support” item.
4. Choose “enable/disable” to enable or disable the TPM 2.0 function (The default setting is to disable this function)

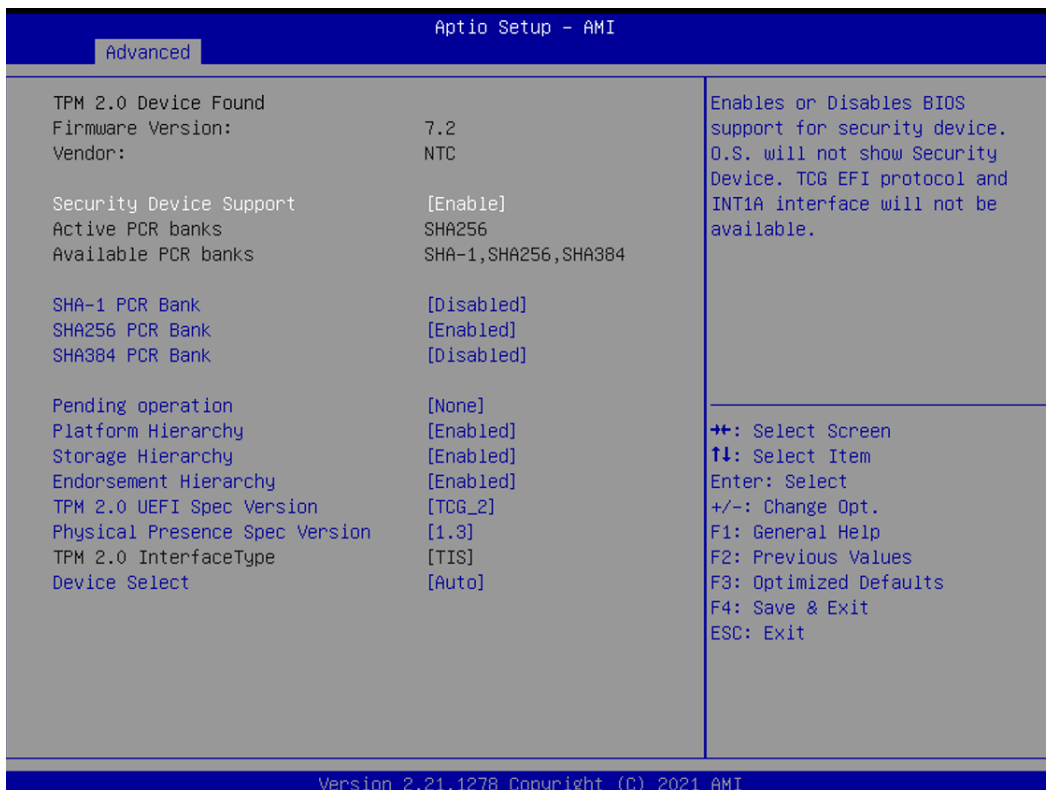

A.12 CPU Turbo Mode BIOS Setting

The UNO-2271G V2 systems supports CPU Turbo mode. This can be enabled or disabled in the BIOS menu by following the instructions:



1. Power on the UNO-2271G V2 system and press “Delete” to enter the BIOS configuration menu.
2. On the “Advanced” tab, select the “CPU Configuration” item.

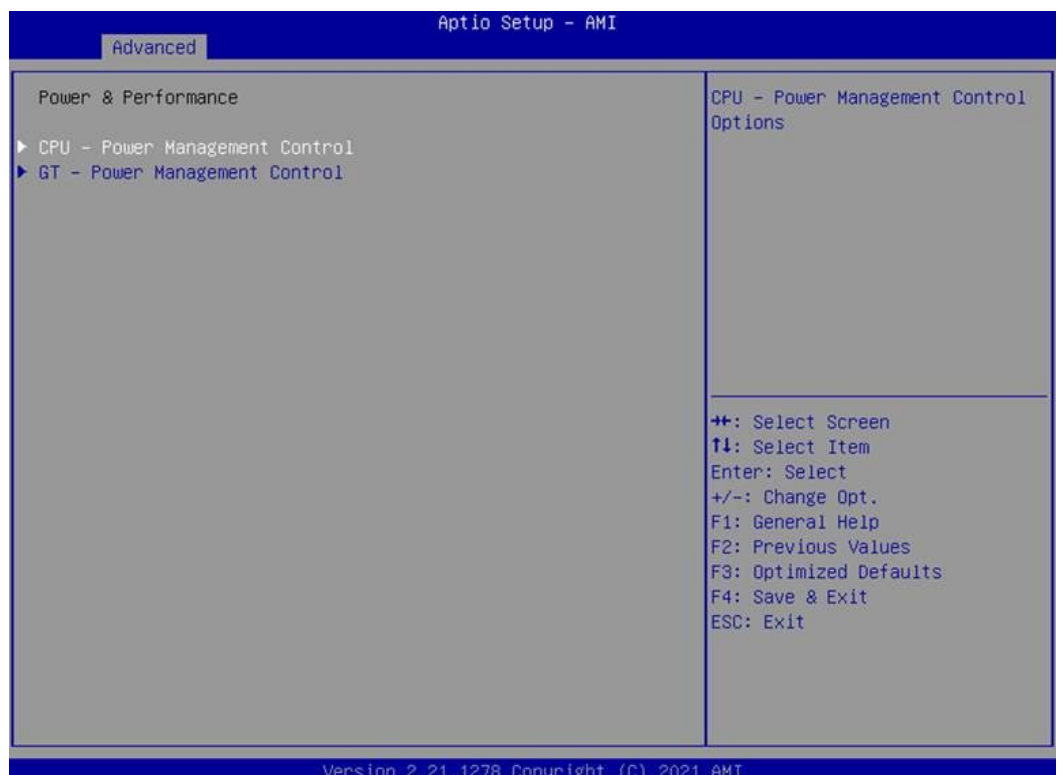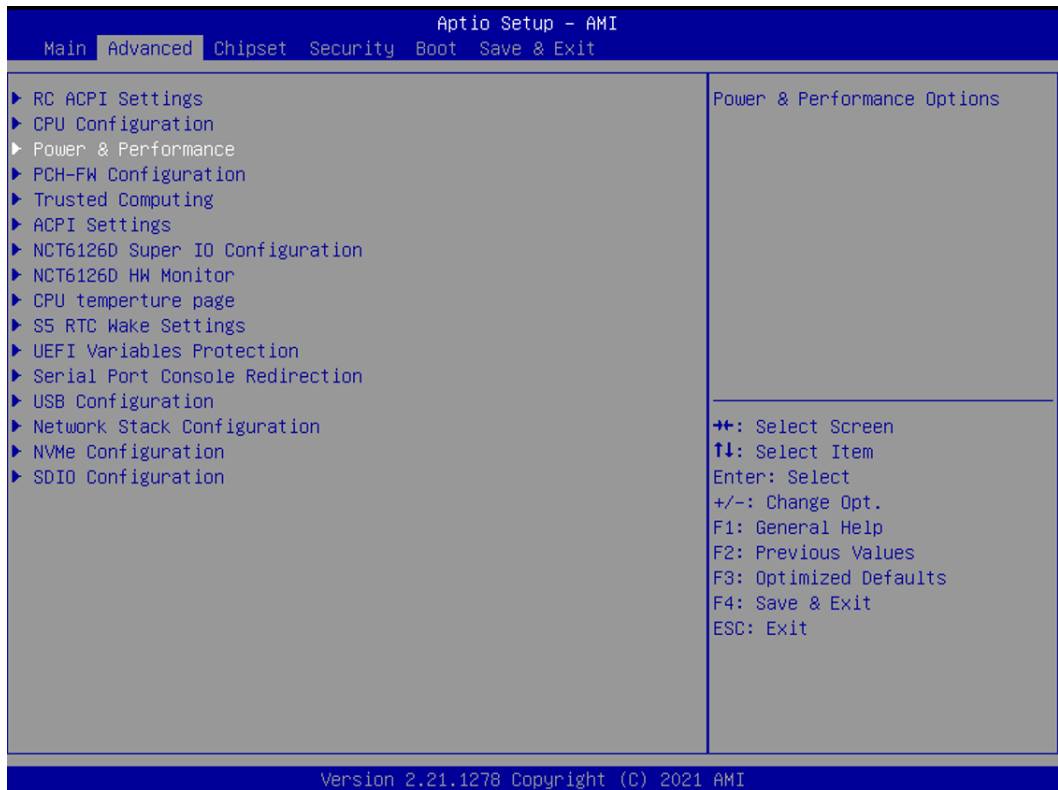

A.13 TCO Setting for Watchdog OS support

The UNO-2271G V2 systems supports Watchdog timer. TCO can be enabled or disabled in the BIOS menu by following the instructions:

1. TCO enable for Linux OS use (BIOS default).
2. TCO disable for Windows OS use.

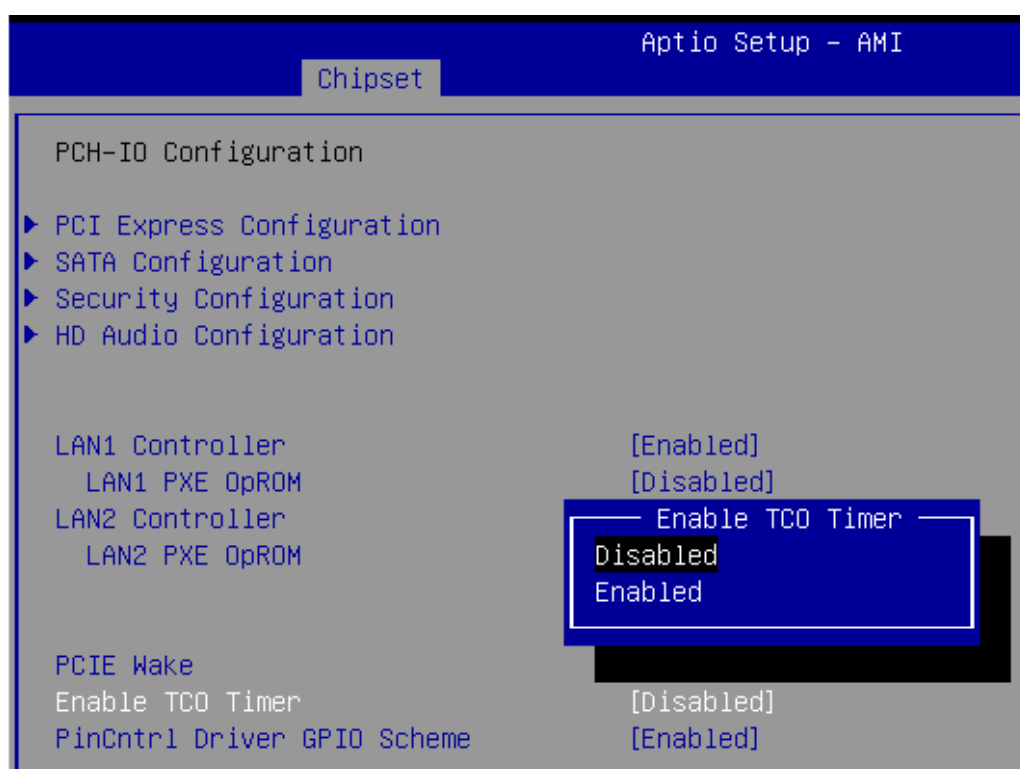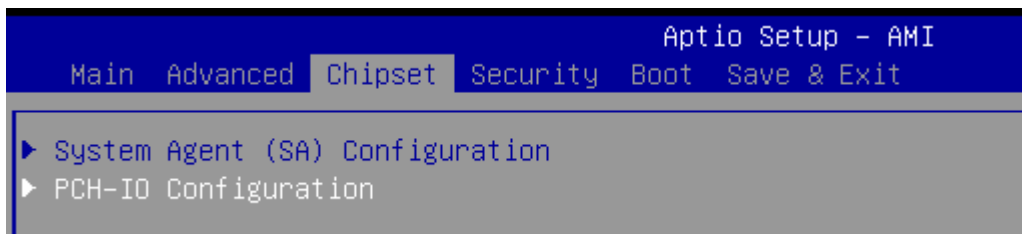

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, such as electronically, by photocopying, recording, or otherwise, without prior written permission from the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2022